



Rotisserie Electric



Models:


AR-7E ROTISSERIE WITH

AR-7VH VENTLESS HOOD

- **INSTALLATION**
- **OPERATION**
- **MAINTENANCE**



W164 N9221 Water Street • P.O. Box 450 • Menomonee Falls, Wisconsin 53052-0450 USA
PHONE: 262.251.3800 • 800.558.8744 USA/CANADA FAX: 262.251.7067 • 800.329.8744 U.S.A. ONLY
www.alto-shaam.com

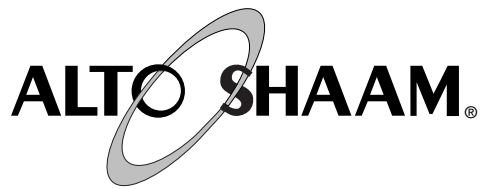

DELIVERY

This Alto-Shaam appliance has been thoroughly tested and inspected to insure only the highest quality unit is provided. Upon receipt, check for any possible shipping damage and report it at once to the delivering carrier. *See Transportation Damage and Claims section located in this manual.*

This appliance, complete with unattached items and accessories, may have been delivered in one or more packages. Check to ensure that all standard items and options have been received with each model as ordered.

Save all the information and instructions packed with the appliance. Complete and return the warranty card to the factory as soon as possible to assure prompt service in the event of a warranty parts and labor claim.


This manual must be read and understood by all people using or installing the equipment model. Contact the Alto-Shaam service department if you have any questions concerning installation, operation, or maintenance.

NOTE: All claims for warranty must include the full model number and serial number of the unit.

UNPACKING

1. Carefully remove the appliance from the carton or crate.

NOTE: Do not discard the carton and other packaging material until you have inspected the unit for hidden damage and tested it for proper operation.

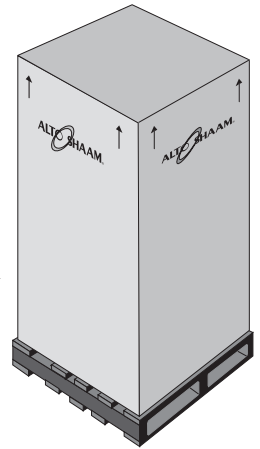

2. Read all instructions in this manual carefully before initiating the installation of this appliance.

DO NOT DISCARD THIS MANUAL.

This manual is considered to be part of the appliance and is to be provided to the owner or manager of the business or to the person responsible for training operators. *Additional manuals are available from the Alto-Shaam service department.*

3. Remove all protective plastic film, packaging materials, and accessories from the appliance before connecting electrical power. Store any accessories in a convenient place for future use.

SAFETY PROCEDURES AND PRECAUTIONS

Knowledge of proper procedures is essential to the safe operation of electrically and/or gas energized equipment. In accordance with generally accepted product safety labeling guidelines for potential hazards, the following signal words and symbols may be used throughout this manual.

DANGER



Used to indicate the presence of a hazard that **WILL** cause severe personal injury, death, or substantial property damage if the warning included with this symbol is ignored.

WARNING



Used to indicate the presence of a hazard that **CAN** cause personal injury, possible death, or major property damage if the warning included with this symbol is ignored.

CAUTION



Used to indicate the presence of a hazard that can or will cause minor or moderate personal injury or property damage if the warning included with this symbol is ignored.

CAUTION

Used to indicate the presence of a hazard that can or will cause minor personal injury, property damage, or a potential unsafe practice if the warning included with this symbol is ignored.

NOTE: Used to notify personnel of installation, operation, or maintenance information that is important but not hazard related.

1. This appliance is intended to cook, hold or process foods for the purpose of human consumption. No other use for this appliance is authorized or recommended.
2. This appliance is intended for use in commercial establishments where all operators are familiar with the purpose, limitations, and associated hazards of this appliance. Operating instructions and warnings must be read and understood by all operators and users.
3. Any troubleshooting guides, component views, and parts lists included in this manual are for general reference only and are intended for use by qualified technical personnel.
4. This manual should be considered a permanent part of this appliance. This manual and all supplied instructions, diagrams, schematics, parts lists, notices, and labels must remain with the appliance if the item is sold or moved to another location.

NOTE



For equipment delivered for use in any location regulated by the following directive:

DO NOT DISPOSE OF ELECTRICAL OR ELECTRONIC EQUIPMENT WITH OTHER MUNICIPAL WASTE.

INSTALLATION

DANGER



IMPROPER INSTALLATION, ALTERATION, ADJUSTMENT, SERVICE, OR MAINTENANCE COULD RESULT IN SEVERE INJURY, DEATH OR CAUSE PROPERTY DAMAGE.

READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.

CAUTION



TO PREVENT PERSONAL INJURY, USE CAUTION WHEN MOVING OR LEVELING THIS APPLIANCE.

CAUTION



METAL PARTS OF THIS EQUIPMENT BECOME EXTREMELY HOT WHEN IN OPERATION. TO AVOID BURNS, ALWAYS USE HAND PROTECTION WHEN OPERATING THIS APPLIANCE.




DANGER



DO NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

SITE INSTALLATION


In order to maintain established National Sanitation Foundation standards, all counter-mounted models must be sealed to the counter with a R.T.V. or silastic meeting N.S.F. requirements or have 6" (152mm) unobstructed clearance at the back and sides of the unit.

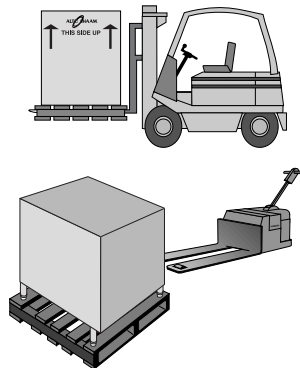

A number of adjustments are associated with initial installation and start-up. It is important that these adjustments be conducted by a qualified service technician. Installation and start-up adjustments are the responsibility of the dealer or user. These adjustments include but are not limited to thermostat calibration, door adjustment, leveling, electrical hook-up and installation of optional casters or legs.

1. The appliance must be installed on a non-combustible, level surface.
2. **DO NOT** install this appliance in any area where it may be affected by any adverse conditions such as steam, grease, dripping water, high temperatures, or any other severely adverse conditions.
3. For both safety and convenience, the rotisserie must be installed in a location to provide easy access to the controls and should be positioned at a safe and convenient height to provide easy loading and unloading of hot products.
4. This appliance must be kept free and clear of any obstructions blocking access for maintenance or service.
5. A rotisserie can be stacked with another rotisserie oven or stacked on top of a matching holding cabinet. Complete stacking instructions are located in this manual.

LEVELING

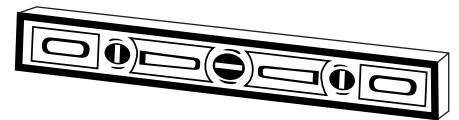

Level the appliance from side-to-side and front-to-back with the use of a spirit level.

We recommend checking the level periodically to make certain the floor has not shifted nor the appliance moved.

NOTE: Failure to properly level this appliance can cause improper function.

MINIMUM CLEARANCE REQUIREMENTS


A 6" (152mm) minimum clearance must be allowed at the back and both sides of the unit. Warranty will become null and void if these directions are not followed.

INSTALLATION



SITE INSTALLATION

AR-7E


DOUBLE PANE CURVED GLASS DOOR

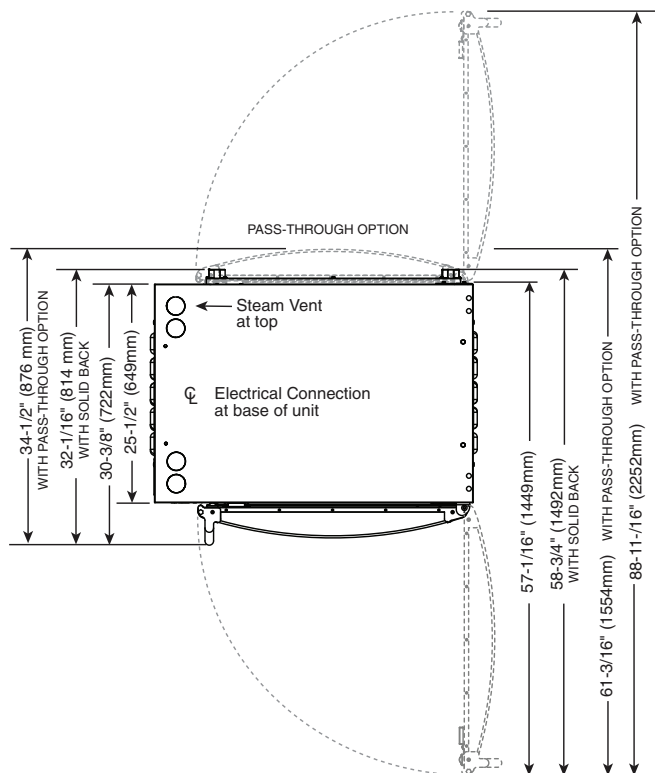


SINGLE PANE FLAT GLASS DOOR

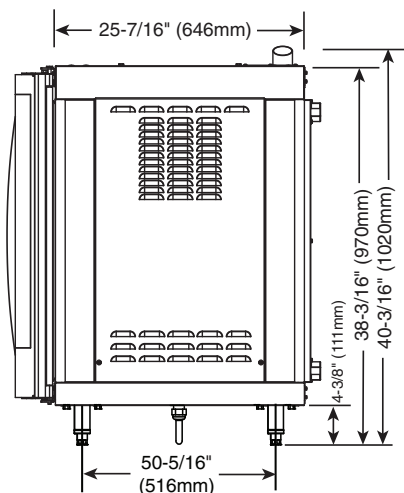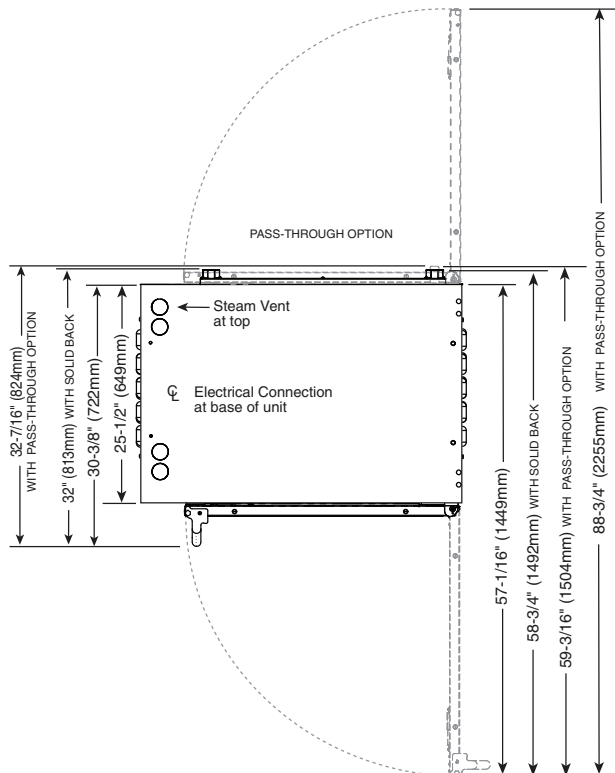

SIDE VIEW - SOLID BACK

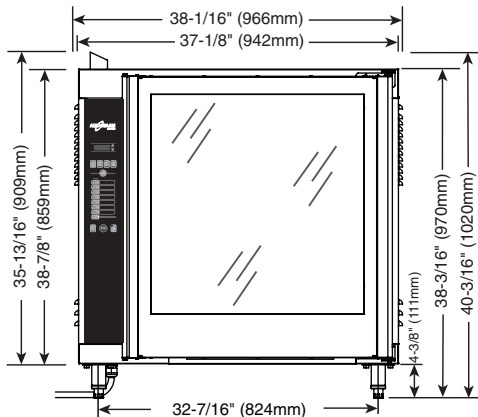

FRONT VIEW


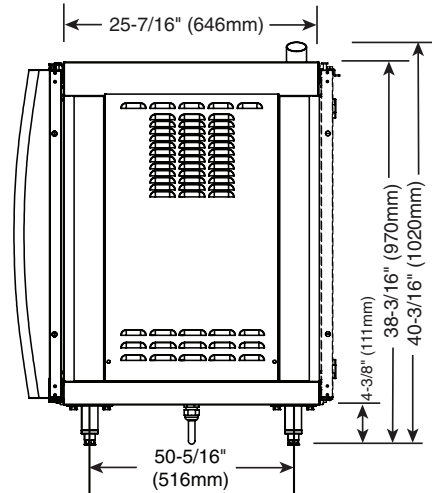


SIDE VIEW - SOLID BACK

SITE INSTALLATION



AR-7VH

VENTLESS HOOD WITH CURVED DOOR

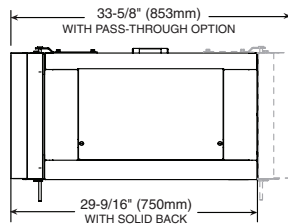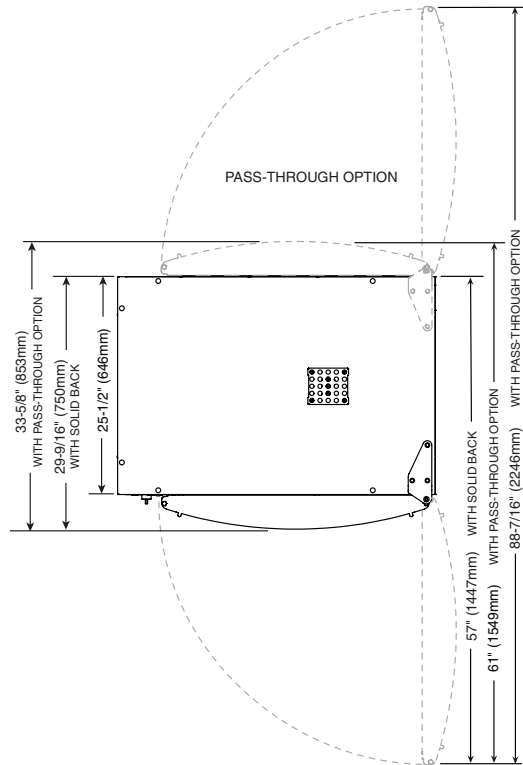


SIDE VIEW

VENTLESS HOOD WITH FLAT DOOR

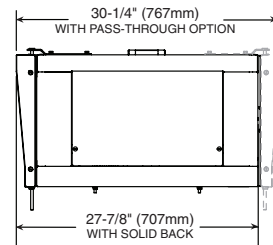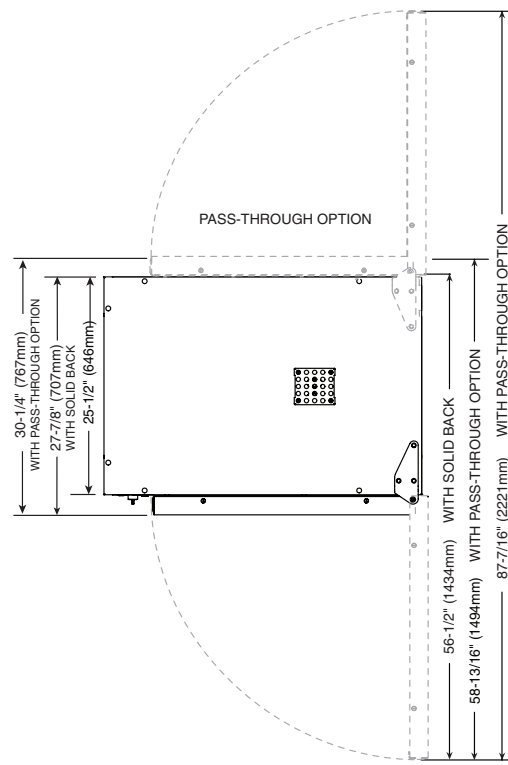

SIDE VIEW

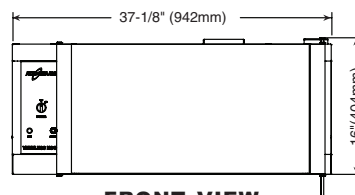

FRONT VIEW

INSTALLATION

ELECTRICAL CONNECTION

The appliance must be installed by a qualified service technician. The oven must be properly grounded in accordance with the National Electrical Code and applicable local codes.

DANGER



To avoid electrical shock, this appliance **MUST** be adequately grounded in accordance with local electrical codes or, in the absence of local codes, with the current edition of the National Electrical Code ANSI/NFPA No. 70. In Canada, all electrical connections are to be made in accordance with CSA C22.1, Canadian Electrical Code Part 1 or local codes.

Plug the unit into a properly grounded receptacle **ONLY**, positioning the unit so that the plug is easily accessible in case of an emergency. Arcing will occur when connecting or disconnecting the unit unless all controls are in the "OFF" position.

Proper receptacle or outlet configuration or permanent wiring for this unit must be installed by a licensed electrician in accordance with applicable local electrical codes.

ELECTRICAL

| VOLTAGE | PHASE | CYCLE / HZ | AMPS | KW | |
|---------|-------|------------|----------------|------------|---------------------|
| 208 | 1 | 60 | 40.0 | 8.3 | BARE END NO PLUG |
| 230 | 1 | 60 | 42.0 | 9.0 | |
| 240 | 1 | 60 | 38.0 | 8.8 | |
| 208 | 3 | 60 | 33.0/ph | 8.3 | BARE END NO PLUG |
| 230 | 3 | 60 | 35.0/ph | 9.0 | |
| 240 | 3 | 60 | 32.0/ph | 8.8 | |
| 380-415 | 3 | 50/60 | 24.0/ph MAX | 8.8 MAX | NO CORD NO PLUG |

DANGER



APPLIANCES WITH NO CORD PROVIDED BY FACTORY MUST BE EQUIPPED WITH A CORD OF SUFFICIENT LENGTH TO PERMIT THE APPLIANCE TO BE MOVED FOR CLEANING.

ELECTRICAL CONNECTIONS MUST BE MADE BY A QUALIFIED SERVICE TECHNICIAN IN ACCORDANCE WITH APPLICABLE ELECTRICAL CODES.

"WARNING" RISK OF FIRE!

Use a UL Listed grounding type plug rated 250 Volts, 50 Amperes, 1 Phase, 3 wire for single phase units and 250 V, 50 A, 3 Phase, 4 wire for three phase units. Plug to be selected and installed only by qualified service personnel. Individual conductors are marked L1, L2, L3 when applicable, N when applicable, and G.

THE ROTISSERIE CAN BE HARD WIRED. PERMANENT WIRING FOR ALL OVENS MUST BE INSTALLED BY A LICENSED ELECTRICIAN IN ACCORDANCE WITH APPLICABLE, LOCAL ELECTRICAL CODES.

230V ROTISSERIES FOR HARD WIRING MUST BE EQUIPPED WITH AN EXTERNAL MAIN SWITCH WHICH DISCONNECTS ALL POLES WITH A CONTACT SEPARATION OF AT LEAST 3MM FOR ALL POLES.

After wiring and power connection has been completed, turn the main power switch to the "ON" position. **The main power switch can be left "ON" for daily use, but should be turned "OFF" when cleaning or performing maintenance or repairs to the rotisserie.**

REGARDING INTERNATIONAL STANDARD UNITS:

If the unit is not equipped with flexible cord with plug, an all-pole country approved disconnection device which has a contact separation of at least 3mm in all poles must be incorporated in the fixed wiring for disconnection. When using a cord without a plug, the green/yellow conductor shall be connected to the terminal which is marked with the ground symbol. If a plug is used, the socket outlet must be easily accessible. If the power cord needs replacement, use a similar one obtained from the distributor.

For 230V units: To prevent an electrical shock hazard between the appliance and other appliances or metal parts in close vicinity, an equalization-bonding stud is provided. An equalization bonding lead must be connected to this stud and the other appliances / metal parts to provide sufficient protection against potential difference. The terminal is marked with the following symbol.



DANGER



ENSURE POWER SOURCE MATCHES VOLTAGE STAMPED ON APPLIANCE NAMEPLATE.

INSTALLATION

DRIP TRAY INSTALLATION

Attach tray using two carriage bolts in base panel. Lift tray up and away to remove.



STACKING COMBINATIONS & INSTALLATION REQUIREMENTS

STACKING COMBINATIONS (FACTORY INSTALLED)

AR-7VH ventless hood *over* AR-7E rotisserie

Requires 4" (102mm) legs for counter top applications. Free standing floor installations require 6" (152mm) leg assembly **5001414** or 5" (127mm) casters **4007**.

[OVERALL HEIGHT: 54-7/16" (1384mm)]

AR-7VH ventless hood *over* AR-7E rotisserie *over* AR-7H companion holding cabinet

Requires 6" (152mm) legs with flanged feet **5001761** bolted to the floor.

[OVERALL HEIGHT: 90-13/16" (2307mm)]

CAUTION



**STACKING APPLICATIONS
OUTSIDE THE U.S. REQUIRE
FLANGED FEET AND MUST
BE BOLTED TO THE FLOOR.**

CAUTION



**MAKE CERTAIN TO FASTEN
EACH OF THE FOUR HOLES**

INSTALLATION


STACKING INSTRUCTIONS

A rotisserie with ventless hood can be stacked on top of a matching holding cabinet.

Only screws, lock washers, and hex nut are required to fasten units together when stacking a rotisserie on top of a matching holding cabinet.

All fastening holes have been prepunched. The stacking combination also requires the minimum clearance of 6-inches (152mm) at the top, back and both sides.

1. Remove the access panels of both units.
2. Punch out the knock out hole (A) in the top panel of the lower unit.
3. Remove power cord from upper unit and discard.
4. The new power cord and strain relief bushing for upper unit should be routed through the knock out hold in the top panel of the lower unit.
5. Carefully lift and place the upper unit into position aligning on bottom unit.
6. Secure units together by inserting a hex head screw and washer inside upper unit, and back them with a washer, lock-washer, and nut inside lower unit. Securely tighten all four screws.
7. Attach a strain relief bushing to the bottom panel of the lower unit to the left of the existing power cord. (B)
8. Route power cord from upper unit through the strain relief bushings, then tighten bushings.
9. Replace the access panels on both units.
10. Attach 4: Support Brackets (1010092) and any required feet or casters (varies) with 4: SC-2191, 4: WS-2867, and 4: WS-22095.

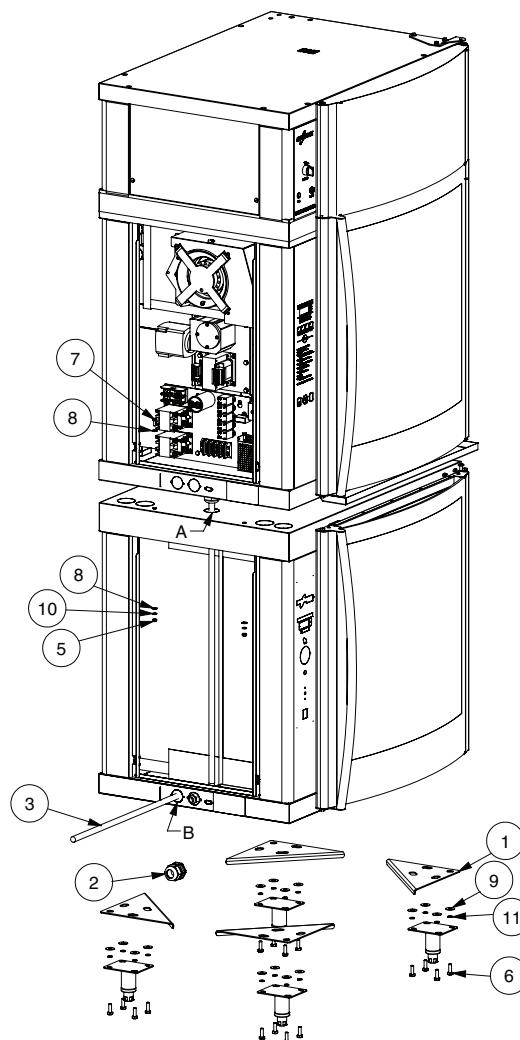


| AR-7EVH OVER AR-7H STACKING ASSEMBLY | | | |
|--------------------------------------|----------|---|-----|
| ITEM NO. | PART NO. | PART DESCRIPTION | QTY |
| 1 | 1010092 | BRACKET, SUPPORT, BASE | 4 |
| 2 | BU-33948 | BUSHING, STRAIN RELIEF, 18MM-25MM AR-7E | 1 |
| 3 | CD-3987 | CORD, 8/4 SEEO W-A, 105C, (-50C) | 1 |
| 4 | CR-3801* | CONNECTORS, *CT, RING, 10MM, SQ/M6 | 4 |
| 5 | NU-2437 | NUT, 1/4-20 HEX S/S | 4 |
| 6 | SC-2191 | SCREW, HEX HEAD, 5/16-18 X 1" LONG | 16 |
| 7 | SC-27385 | SCREW, 1/4/20 X 3/4" LG HEX HEAD | 4 |
| 8 | WS-22094 | WASHER, 1/4", FLAT, 5/8 OD 18-8 SS | 8 |
| 9 | WS-22095 | WASHER, 3/8" ID, 1" OD, FLAT, 18-8 SS | 16 |
| 10 | WS-2294 | LOCK WASHER, 1/4" | 4 |
| 11 | WS-2867 | LOCK WASHER, 5/16" | 16 |

*NOT SHOWN

| AR-7E & AR-7VH — OPTIONS & ACCESSORIES | | |
|--|---------------------------------------|-------------|
| DESCRIPTION | | PART NUMBER |
| DOOR OPTIONS | SINGLE PANE FLAT GLASS WITH HANDLE | 5007012 |
| | SINGLE PANE FLAT GLASS WITHOUT HANDLE | 5007013 |
| DOOR HANDLE | ON NON-CONTROL SIDE | HD-26900 |
| DRIP PAN , STAINLESS STEEL | | 1001976 |
| DRIP PAN TRAY , DOOR MOUNTED | FLAT GLASS DOOR | 5004859 |
| | CURVED GLASS DOOR | 1002598 |
| FEET, RUBBER , 2" (51mm) FOR COUNTER TOP UNITS ONLY | CE ONLY | 5001614 |
| LEGS | ASSEMBLY, 4" (102mm) | 5001765 |
| | ASSEMBLY, 6" (152mm) | 5001414 |
| | ASSEMBLY, FLANGED FEET, 6" (152mm) | 5001761 |
| | (REQUIRED FOR STACKING UNITS) | |
| MULTI-PURPOSE WIRE BASKET (.50 diameter pin) | | BS-26019 |
| SPITS | ANGLED SPIT, STAINLESS STEEL | SI-25934 |
| | PIERCING SPIT, STAINLESS STEEL | SI-25729 |
| | TURKEY SPIT, STAINLESS STEEL | SI-26980 |
| | ANGLED SPIT, TEFLON COATED | 5001335 |
| STACKING ASSEMBLY (FACTORY INSTALLED) | AR-7E OVER AR-7H (208-240V, 1PH) | 5008787 |
| | AR-7E OVER AR-7H (208-240V, 3PH) | 5008948 |
| | AR-7E OVER AR-7H (380-415V) | 5008922 |
| STANDS | AR-7E W/ SHELF, 36" (914mm) | FR-26550 |
| | AR-7E OVER 750-S, 36" (914mm) | 5002058 |
| TEFLON® COATED ACCESSORY PACKAGE | | 5001302 |
| COMMERCIAL GRADE, INCLUDES DISKS, DRIP TRAY AND 7 ANGLED SPITS | | |
| VENTLESS HOOD REPLACEMENT FILTERS | GREASE FILTER | FI-25867 |
| | CHARCOAL FILTER | FI-25866 |

OPERATING INSTRUCTIONS

CONTROL IDENTIFICATION

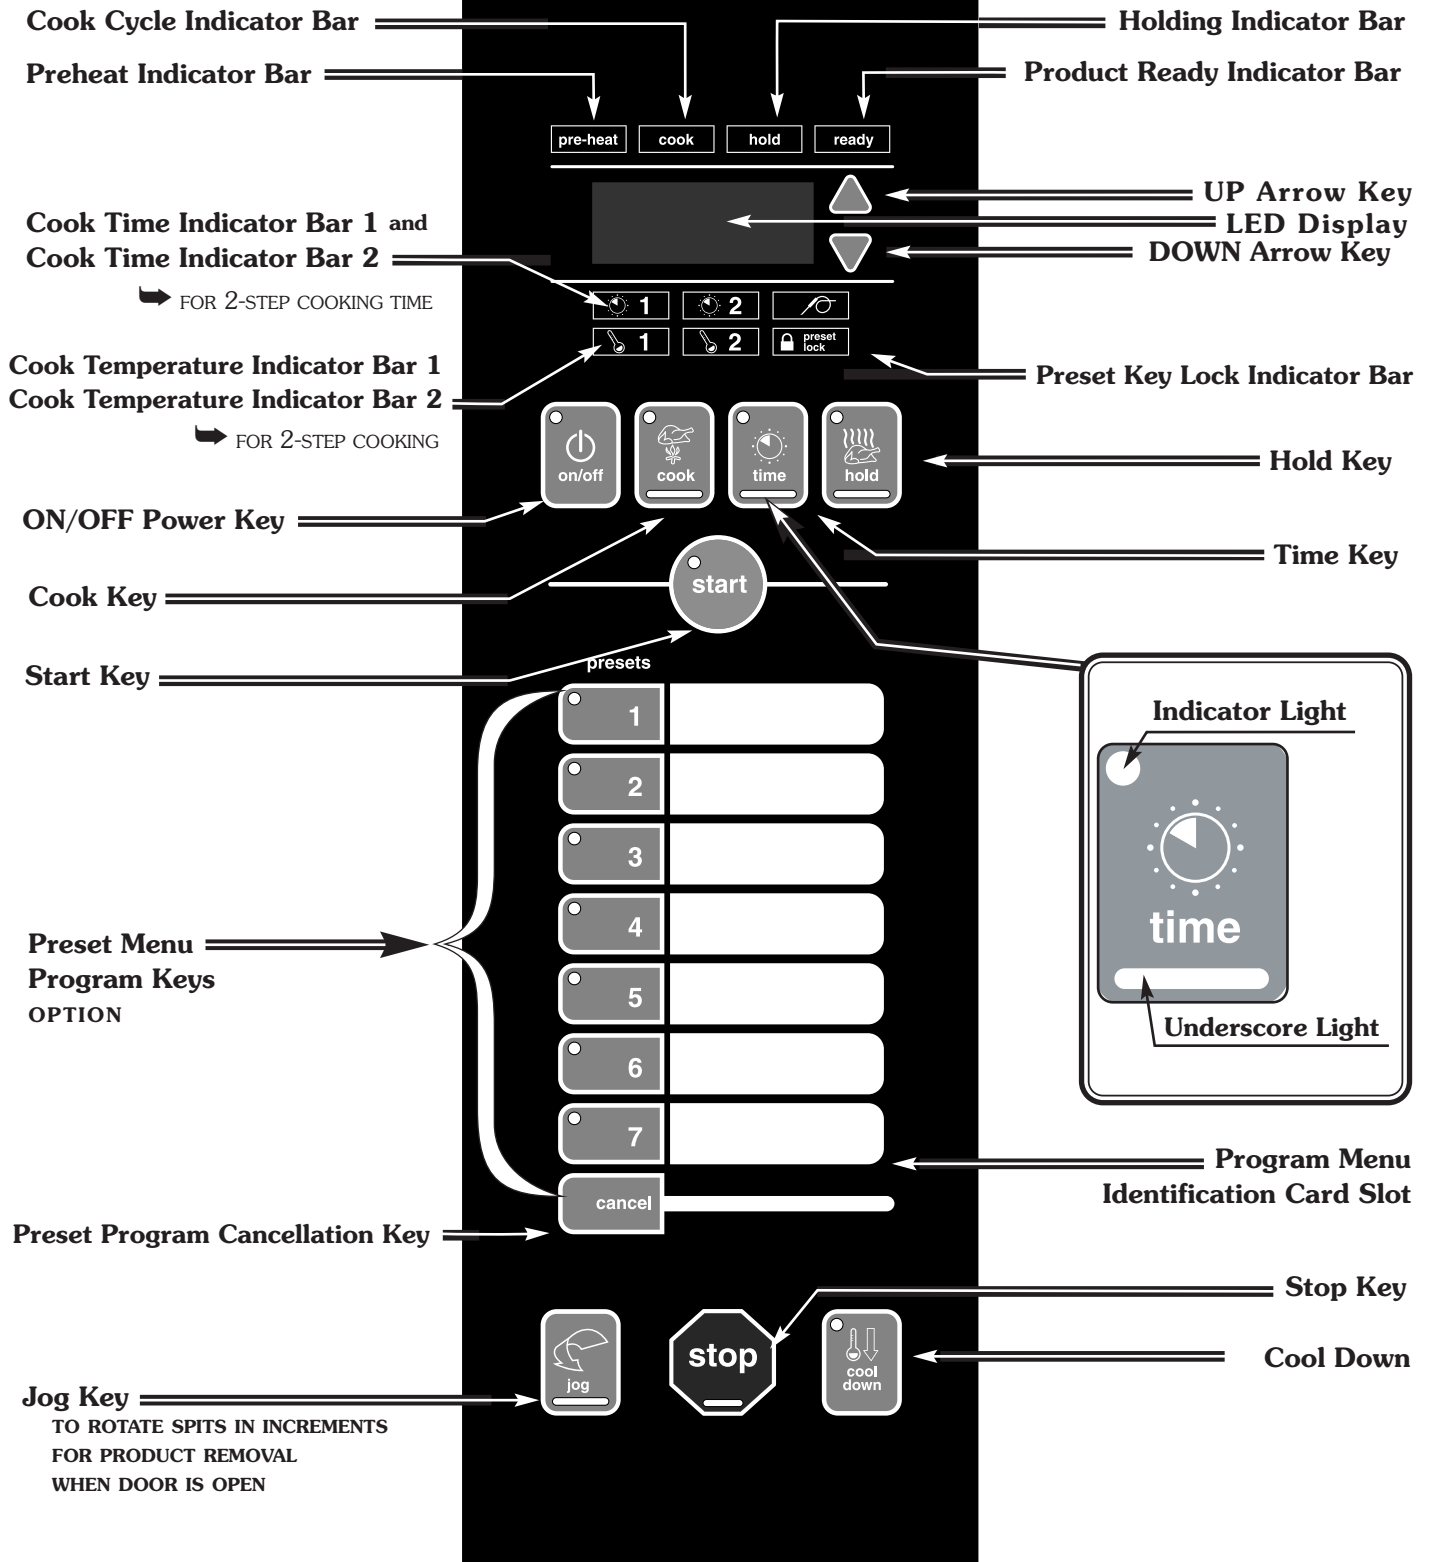

OPERATING INSTRUCTIONS



Press the ON/OFF key.

The ON/OFF indicator light will illuminate.

The display will show the last set holding temperature.

The hold indicator will illuminate.

The rotisserie will begin to preheat to the holding temperature shown in the display.



Press the COOK key.

The COOK and the TIME underscore lights will alternately illuminate.

The display will indicate the last set cooking temperature when the COOK underscore light is illuminated.

The display will indicate the last set cooking time when the TIME underscore light is illuminated.

Cook temperature indicator bar will illuminate for:

COOK TEMPERATURE 1 

Press the COOK key again if 2-step cooking is required.

Cook temperature indicator bar will illuminate for:

COOK TEMPERATURE 2 

AFTER PRESSING THE COOK KEY:



...to change the displayed temperature, press the up and down arrow key when ...



COOK TEMPERATURE 1

or



COOK TEMPERATURE 2

is illuminated.



Press the TIME key.

The TIME underscore light will illuminate.

The display will indicate the last set cooking time when the TIME underscore light is illuminated.

The display will indicate the last set cooking temperature when the COOK underscore light is illuminated.

Time indicator bar will illuminate for:

TIME 1 

Press the TIME key again if 2-step cooking is required.

Time indicator bar will illuminate for:

TIME 2 

AFTER PRESSING THE TIME KEY:



...to change the displayed time, press the up and down arrow key when ...



TIME 1

or



TIME 2

is illuminated.



Press the HOLD key.

The HOLD underscore light will illuminate.

The display will indicate the last set holding temperature.

- Product programming can be considered complete after the holding temperature has been set **or** additional browning time can be added if desired.
- Automatic holding time will activate when the cooking cycle time and any additional browning time has elapsed and the **PRODUCT ready** BAR is illuminated.
- The product will continue to cook as it decreases from the cooking temperature to the holding temperature. For best results, always allow for product temperature override.

AFTER PRESSING THE HOLD KEY:



Change the holding temperature, by pressing the up and down arrow key when the HOLD underscore light is illuminated.



OPERATING INSTRUCTIONS


ADDITIONAL BROWNING FEATURE

The control allows the operator to set a specific period of time for additional browning between the end of the COOK TIME and the illumination of the PRODUCT **ready** BAR at the end of the cooking cycle. Browning time is to be added during initial product programming.



AFTER THE HOLDING TEMPERATURE HAS BEEN SET, PRESS THE HOLD KEY AGAIN FOR BROWNING TIME DISPLAY.

The display will indicate “0” time or the last browning time.

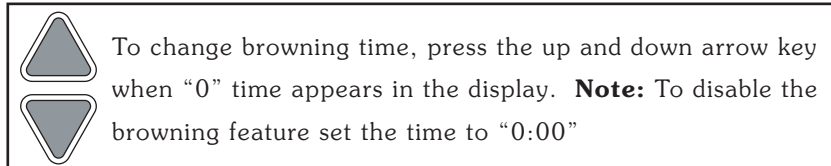

AVERAGE BROWNING TIME FOR MOST PRODUCTS IS BETWEEN 5 AND 20 MINUTES

- The radiant heat browning feature will only operate if a time period has been set.
- The product will continue to cook as it decreases from the cooking temperature to the holding temperature. For best results, always allow for product temperature override.
- The PRODUCT **ready** BAR will illuminate at the end of the set browning time and the oven temperature will decrease to the set holding temperature in the automatic hold mode.

**THE ROTISSERIE WILL CONTINUE TO PREHEAT UNTIL THE COOK TEMPERATURE IS REACHED.
ALWAYS ALLOW THE ROTISSERIE TO PREHEAT
TO THE FULL SET COOKING TEMPERATURE**

When fully preheated, the **START** key and the PRODUCT **ready** BAR will flash and the control will beep four times

LOAD PRODUCT PRESS START

- The spit motor will begin to rotate.
- The display will alternate between showing the set cook temperature and set cook time.

When the cooking time and any additional set browning time is complete, the PRODUCT **ready BAR will illuminate to indicate the end of the cooking function.**

▶ ▶ ▶ AUTOMATIC HOLDING TIME WILL ACTIVATE. ◀ ◀ ◀

- The rotisserie will remain at the set holding temperature up to a period of four (4) hours.
- The display will alternate between the set holding temperature and the elapsed holding time since READY.
- The rotisserie will shut down after the 4-hour automatic holding time period has elapsed.

OPERATING INSTRUCTIONS

PRESET MENU KEY OPTION


The Alto-Shaam rotisserie provides the operator with the ability to set as many as seven cooking programs. Each cooking program can be preset to include all cooking and holding functions. Cooking programs are stored and recalled using the PRESET Keys labeled **1 through 7**.

PROGRAMMING A COOKING PROGRAM:



With the rotisserie oven in the “OFF” position, determine the food product procedure to be programmed. Press and release control ON/OFF key. The oven will beep for one second and power to the unit will be indicated by an illuminated green indicator light located in the upper left corner of the ON/OFF key. The oven will begin operating in the hold mode. The amber hold indicator will be illuminated and the last set hold temperature will be displayed.

ENTER ALL COOKING AND HOLDING PARAMETERS FOR THE PRODUCT SELECTED AS INSTRUCTED ON THE PREVIOUS PAGE.

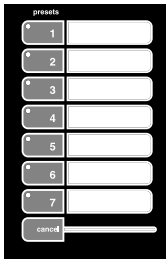

Select a number for the programmed product. Press and hold the selected PRESET number key until you hear an audible signal which will occur within approximately 4 seconds. The number key program indicator light will illuminate. The programmed product is now stored in memory on the specific number key selected. Additional programs can be stored in the remaining PRESET Keys if not previously programmed.

NOTE: The last PRESET Key programmed will be the oven cooking run sequence for the next product to be programmed. Settings can be manually changed for the next product and an alternate pre-programmed letter key selected.

TO COOK WITH PRESET MENU KEYS:

PRESS AND RELEASE CONTROL ON/OFF KEY.



- The control will beep and the green indicator light on the ON/OFF key will illuminate.
- The amber hold indicator will illuminate.
- The oven will begin operating in the hold mode.
- The previously set hold temperature will be displayed.
- The green indicator will illuminate on all programmed PRESET Keys.

PRESS DESIRED PRESET KEY (1 THROUGH 7)

- The Pre-Heat indicator will illuminate.
 - ➔ The rotisserie oven will automatically preheat to the cooking temperature programmed.
- The oven will beep when preheated and the preheat indicator will go out.
- Both the Ready and Start indicator lights will flash.
 - ➔ The set cook temperature will be maintained by the oven and appear in the display while in the ready/start mode.

LOAD THE PREPARED PRODUCT SPITS INSIDE OVEN AND CLOSE THE OVEN DOOR.

PRESS AND RELEASE  START KEY.

NOTE: The rotisserie will beep 4 times when cooking is finished.

OPERATING INSTRUCTIONS

ATTENTION

After programming a specific product into memory on a preset key number, it is suggested the product be identified by inserting a label in the Program Menu Identification Card Slot.

| presets | |
|---------|----------------|
| 1 | CHICKEN, WHOLE |
| 2 | CHICKEN, |
| 3 | QUARTERS |
| 4 | TURKEY BREAST |
| 5 | PORK RIBS |
| 6 | PORK LOIN |
| 7 | LAMB LEGS |
| cancel | |

TO ERASE A PRESET

To erase a preset, the oven must be in either the power-up hold mode or in the preheat mode. The oven cannot be in a cook or automatic hold.

When the oven is in the power-up hold mode or in the preheat mode, press and hold both the CANCEL Key and the appropriate number PRESET Key to be erased. The oven will beep for seven (7) seconds and the preset indicator light will go out once the preset is erased.

PRESET MENU LOCK AND UNLOCK

The preset menu keys can be locked at any time in order to prevent inadvertent or accidental setting changes.

To lock the preset keys, press the **UP** ARROW Key along with the **ON/OFF** Key. The rotisserie will beep and the preset lock indicator will illuminate. Release all keys. The rotisserie presets are now locked.



To unlock the preset keys, press the **DOWN** ARROW Key along with the **ON/OFF** Key. The rotisserie will beep twice and the preset lock indicator will extinguish. Release all keys. The preset keys are now unlocked and ready for programming.

FAHRENHEIT OR CELSIUS SELECTION

With the control OFF, **PRESS AND HOLD** the **UP** arrow key for 2 seconds to toggle the temperature scale. When toggled, the new temperature scale will appear on the display.



COOL DOWN



To cool down the unit:

- Press the Stop button
- **PRESS AND HOLD** the **Cool Down** key until “cool” appears in the display. The unit will run the fan only with or without the door open to cool down the cavity.
- Press the Stop button again to cancel the cool down process.

WARNING




THE CONVECTION FAN CONTINUES TO ROTATE DURING THE COOL DOWN PROCESS. DO NOT OPEN THE PANEL WHILE COOLING DOWN THE ROTISSERIE OVEN.

OPERATING INSTRUCTIONS

PRODUCT LOADING

STANDARD SPITS


Each of the seven rotisserie spits includes two welded prongs on the square end and one welded, ridged prong on the tapered end. Insert the two-prong, square end into the two holes indicated on the disk assembly drive wheel in the drawing. Insert the tapered, ridged-prong end into the top hole indicated on the opposite side and maneuver until the ridge catches in the hole.

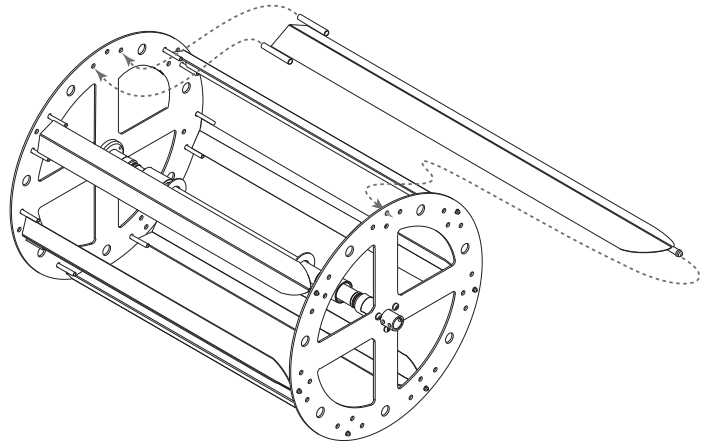

OPTIONAL SPITS/BASKETS

When optional spits are used, insert the spits in the drive wheel as indicated in the illustration.

When inserting the basket, put the smooth pin (A) end in first. When removing the basket, the machined pin (B) comes out first.

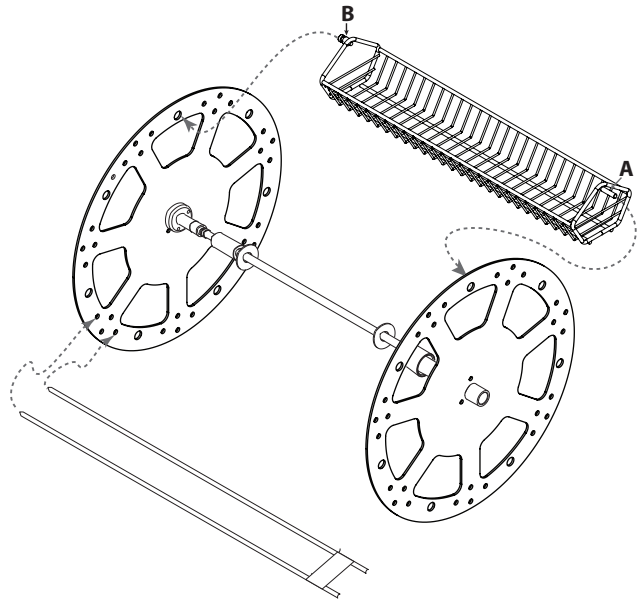

IMPORTANT NOTE:

When using a partial quantity of standard or optional spits, space the spits evenly as possible around the drive wheel to maintain balance and even rotation.

SPECIAL ATTENTION:


A combination of standard, piercing, and basket spits can be used at the same time but **NOT** in every spit insertion position. The use of a spit in every position will interfere with the free rotation of the baskets. Using a combination of spits can only be accomplished at significantly reduced rotisserie capacity.

OPERATING INSTRUCTIONS

PRODUCT LOADING

STANDARD SPIT

Insert whole chickens with the legs toward the square end of the spit. Load up to 3, 3-1/2 lb (1,6 kg) chickens per spit for a total of 21 chickens or 4, 2-1/2 lb (1,1 kg) chickens for a total of 28 whole chickens.

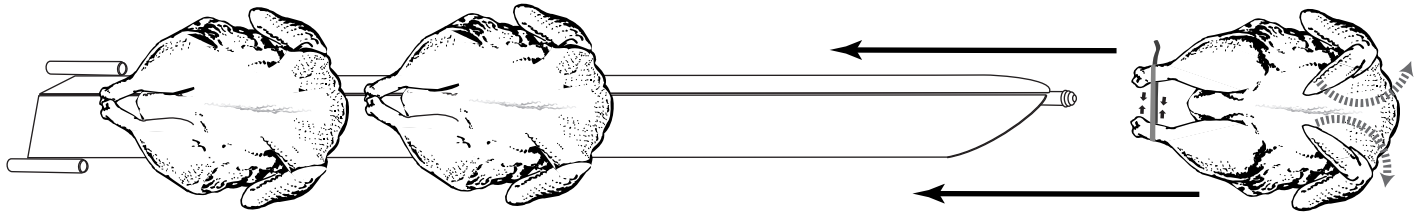


PIERCING SPIT (OPTION)

The optional piercing spit (Item SI-25729) will accommodate 4, 2-1/2 lb (1,1 kg) to 3-1/2 lb (1,6 kg) whole chickens per spit.




BASKET SPIT (OPTION)

Basket spits (Item BS-26019 with .50 diameter pin) are useful for irregular size products, denser items, or heavier products that need more support than the piercing spits.

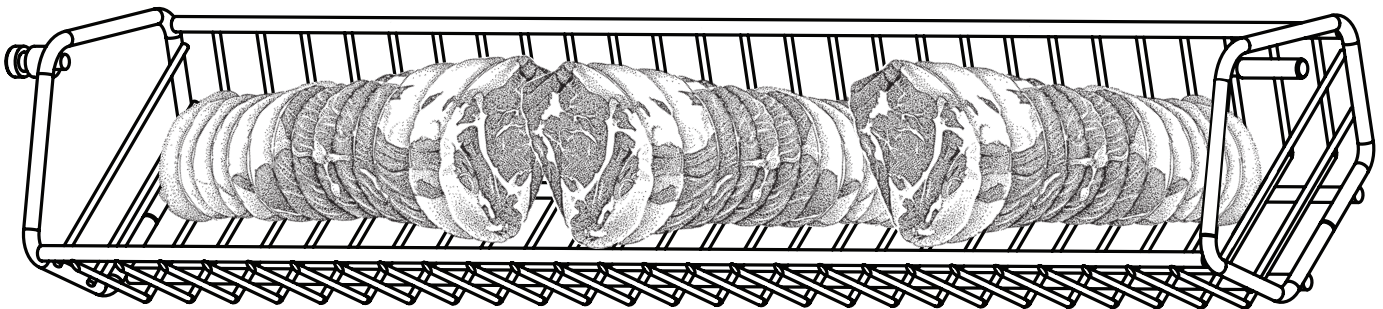

TURKEY SPIT (OPTION)

The optional turkey spit (Item SI-26980) will accommodate a turkey up to 25 lb.

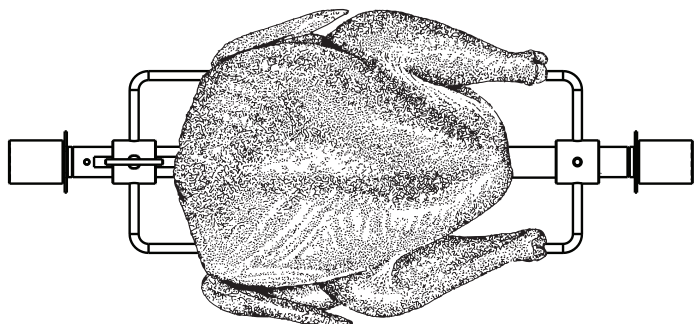

OPERATING INSTRUCTIONS

CHICKEN, HALVES OR PIECES (8-PIECE CUT)

CAPACITY: 2-1/2 to 3 lb (1,1 to 1,4 kg)

SUGGESTED SPIT: BASKET

REMOVE PRODUCT IMMEDIATELY
WHEN INTERNAL TEMPERATURE IS REACHED

ALLOW THE ROTISSERIE TO PREHEAT

LOAD PRODUCT WHEN OVEN BEEPS AT REGULAR INTERVALS AND
THE START KEY AND READY INDICATOR BEGIN FLASHING



Press the ON/OFF key.

Press and set the COOK key.

COOK TEMPERATURE 1



425°F (218°C)

Press and set the COOK key for 2-step cooking.

COOK TEMPERATURE 2

NOT REQUIRED

Press and set the TIME key.

TIME 1



30 MINUTES

Press and set the TIME key
for 2-step cooking.

TIME 2

NOT REQUIRED

Press and set the HOLD key.



160°F (71°C)

Press the HOLD key again
to add BROWNING TIME.

NOT REQUIRED

WHEN PREHEATED:  **LOAD PRODUCT**  **PRESS START**

FINAL INTERNAL TEMPERATURE

185°F (85°C)

ready

USE THE FOLLOWING DIRECTIONS WHEN
LONG-TERM HOLDING IN THE ROTISSERIE

ALLOW THE ROTISSERIE TO PREHEAT

LOAD PRODUCT WHEN OVEN BEEPS AT REGULAR INTERVALS AND
THE START KEY AND READY INDICATOR BEGIN FLASHING



Press the ON/OFF key.

Press and set the COOK key.

COOK TEMPERATURE 1



425°F (218°C)

Press and set the COOK key for 2-step cooking.

COOK TEMPERATURE 2

NOT REQUIRED

Press and set the TIME key.

TIME 1



20 MINUTES

Press and set the TIME key
for 2-step cooking.

TIME 2

NOT REQUIRED

Press and set the HOLD key.



160°F (71°C)

Press the HOLD key again
to add BROWNING TIME.

NOT REQUIRED

WHEN PREHEATED:  **LOAD PRODUCT**  **PRESS START**

FINAL INTERNAL TEMPERATURE

185°F (85°C)

ready

OPERATING INSTRUCTIONS

CHICKEN, WHOLE

CAPACITY: 2-1/2 to 3 lb (1,1 to 1,4 kg)

SUGGESTED SPIT: STANDARD OR PIERCING SPIT

REMOVE PRODUCT IMMEDIATELY
WHEN INTERNAL TEMPERATURE IS REACHED

ALLOW THE ROTISSERIE TO PREHEAT

LOAD PRODUCT WHEN OVEN BEEPS AT REGULAR INTERVALS AND
THE START KEY AND READY INDICATOR BEGIN FLASHING



Press the ON/OFF key.

Press and set the COOK key.

COOK TEMPERATURE 1



400°F (204°C)

Press and set the COOK key for 2-step cooking.

COOK TEMPERATURE 2

425°F (218°C)

Press and set the TIME key.

TIME 1



35 MINUTES

Press and set the TIME key
for 2-step cooking.

TIME 2

15 MINUTES

Press and set the HOLD key.



160°F (71°C)

Press the HOLD key again
to add BROWNING TIME.

5 MINUTES

WHEN PREHEATED:

LOAD PRODUCT



PRESS START

FINAL INTERNAL TEMPERATURE

185°F (85°C)

ready

USE THE FOLLOWING DIRECTIONS WHEN
LONG-TERM HOLDING IN THE ROTISSERIE

ALLOW THE ROTISSERIE TO PREHEAT

LOAD PRODUCT WHEN OVEN BEEPS AT REGULAR INTERVALS AND
THE START KEY AND READY INDICATOR BEGIN FLASHING



Press the ON/OFF key.

Press and set the COOK key.

COOK TEMPERATURE 1



375°F (190°C)

Press and set the COOK key for 2-step cooking.

COOK TEMPERATURE 2

425°F (218°C)

Press and set the TIME key.

TIME 1



20 MINUTES

Press and set the TIME key
for 2-step cooking.

TIME 2

20 MINUTES

Press and set the HOLD key.



160°F (71°C)

Press the HOLD key again
to add BROWNING TIME.

5 MINUTES

WHEN PREHEATED:

LOAD PRODUCT



PRESS START

FINAL INTERNAL TEMPERATURE

185°F (85°C)

OPERATING INSTRUCTIONS

TURKEY BREAST

CAPACITY: 5-1/2 lb (2,5 kg)

TOTAL: 8 TURKEY BREASTS

SUGGESTED SPIT: BASKET

ALLOW THE ROTISSERIE TO PREHEAT

LOAD PRODUCT WHEN OVEN BEEPS AT REGULAR INTERVALS AND THE START KEY AND READY INDICATOR BEGIN FLASHING



Press the ON/OFF key.

Press and set the COOK key.

COOK TEMPERATURE 1 **1**



250°F (121°C)

Press and set the COOK key for 2-step cooking.

COOK TEMPERATURE 2 **2**

400°F (204°C)

Press and set the TIME key.

TIME 1 **1**



1-1/2 HOURS

Press and set the TIME key for 2-step cooking.

TIME 2 **2**

15 MINUTES

Press and set the HOLD key.



165°F (74°C)

Press the HOLD key again to add BROWNING TIME.

NONE: NOT REQUIRED

WHEN PREHEATED:

LOAD PRODUCT



PRESS START

FINAL INTERNAL TEMPERATURE

180°F (82°C)

ready

PORK RIBS

CAPACITY: 2-3/4 DOWN

TOTAL: 2 FULL SLABS PER BASKET

SUGGESTED SPIT: BASKET

ALLOW THE ROTISSERIE TO PREHEAT

LOAD PRODUCT WHEN OVEN BEEPS AT REGULAR INTERVALS AND THE START KEY AND READY INDICATOR BEGIN FLASHING



Press the ON/OFF key.

Press and set the COOK key.

COOK TEMPERATURE 1 **1**



250°F (121°C)

Press and set the COOK key for 2-step cooking.

COOK TEMPERATURE 2 **2**

375°F (191°C)

Press and set the TIME key.

TIME 1 **1**



40 MINUTES

Press and set the TIME key for 2-step cooking.

TIME 2 **2**

5 MINUTES

Press and set the HOLD key.



150°F (66°C)

Press the HOLD key again to add BROWNING TIME.

15 MINUTES

WHEN PREHEATED:

LOAD PRODUCT



PRESS START

FINAL INTERNAL TEMPERATURE

160° TO 170°F (71° TO 77°C)

ready

OPERATING INSTRUCTIONS

PORK LOIN, BONELESS

CAPACITY: 5 to 7 lb (2,3 to 3,2 kg) AVERAGE WEIGHT

TOTAL: 1 TO 2 PORK LOINS PER BASKET

SUGGESTED SPIT: BASKET

ALLOW THE ROTISSERIE TO PREHEAT

LOAD PRODUCT WHEN OVEN BEEPS AT REGULAR INTERVALS AND THE START KEY AND READY INDICATOR BEGIN FLASHING



Press the ON/OFF key.

Press and set the COOK key.

COOK TEMPERATURE 1 **1**



250°F (121°C)

Press and set the COOK key for 2-step cooking.

COOK TEMPERATURE 2 **2**

350°F (177°C)

Press and set the TIME key.

TIME 1 **1**



1 HOUR

Press and set the TIME key for 2-step cooking.

TIME 2 **2**

15 MINUTES

Press and set the HOLD key.



160°F (71°C)

Press the HOLD key again to add BROWNING TIME.

NONE: NOT REQUIRED

WHEN PREHEATED:

LOAD PRODUCT



PRESS START

FINAL INTERNAL TEMPERATURE

155° to 165°F (68° to 74°C)

ready

LAMB LEG, BONELESS

CAPACITY: 8 to 11 lb (4 to 5 kg)

TOTAL: 60 lb (27 kg) maximum

SUGGESTED SPIT: PIERCING

ALLOW THE ROTISSERIE TO PREHEAT

LOAD PRODUCT WHEN OVEN BEEPS AT REGULAR INTERVALS AND THE START KEY AND READY INDICATOR BEGIN FLASHING



Press the ON/OFF key.

Press and set the COOK key.

COOK TEMPERATURE 1 **1**



250°F (121°C)

Press and set the COOK key for 2-step cooking.

COOK TEMPERATURE 2 **2**

350°F (177°C)

Press and set the TIME key.

TIME 1 **1**



1-1/2 HOURS

Press and set the TIME key for 2-step cooking.

TIME 2 **2**

15 MINUTES

Press and set the HOLD key.



150°F (66°C) MEDIUM DONENESS

Press the HOLD key again to add BROWNING TIME.

15 MINUTES

WHEN PREHEATED:

LOAD PRODUCT



PRESS START

FINAL INTERNAL TEMPERATURE

145° TO 150°F (63° TO 66°C)

ready

CARE AND CLEANING

CLEANING AND PREVENTIVE MAINTENANCE

PROTECTING STAINLESS STEEL SURFACES



It is important to guard against corrosion in the care of stainless steel surfaces. Harsh, corrosive, or inappropriate chemicals can completely destroy the

protective surface layer of stainless steel. Abrasive pads, steel wool, or metal implements will abrade surfaces causing damage to this protective coating and will eventually result in areas of corrosion. Even water, particularly hard water that contains high to moderate concentrations of chloride, will cause oxidation and pitting that result in rust and corrosion. In addition, many acidic foods spilled and left to remain on metal surfaces are contributing factors that will corrode surfaces.

Proper cleaning agents, materials, and methods are vital to maintaining the appearance and life of this appliance. Spilled foods should be removed and the area wiped as soon as possible but at the very least, a minimum of once a day. Always thoroughly rinse surfaces after using a cleaning agent and wipe standing water as quickly as possible after rinsing.

CLEANING AGENTS

Use non-abrasive cleaning products designed for use on stainless steel surfaces. Cleaning agents must be chloride-free compounds and must not contain quaternary salts. Never use hydrochloric acid (muriatic acid) on stainless steel surfaces. Always use the proper cleaning agent at the manufacturer's recommended strength. Contact your local cleaning supplier for product recommendations.

CLEANING MATERIALS

The cleaning function can usually be accomplished with the proper cleaning agent and a soft, clean cloth. When more aggressive methods must be employed, use a non-abrasive scouring pad on difficult areas and make certain to scrub with the visible grain of surface metal to avoid surface scratches. Never use wire brushes, metal scouring pads, or scrapers to remove food residue.

|  CAUTION | |
|---|---|
|    | TO PROTECT STAINLESS STEEL SURFACES, COMPLETELY AVOID THE USE OF ABRASIVE CLEANING COMPOUNDS, CHLORIDE BASED CLEANERS, OR CLEANERS CONTAINING QUATERNARY SALTS. NEVER USE HYDROCHLORIC ACID (MURIATIC ACID) ON STAINLESS STEEL. NEVER USE WIRE BRUSHES, METAL SCOURING PADS OR SCRAPERS. |

CARE AND CLEANING

EQUIPMENT CARE

Under normal circumstances, this oven should provide you with long and trouble free service. There is no preventative maintenance required, however, the following Equipment Care Guide will maximize the potential life and trouble free operation of this oven. The cleanliness and appearance of this equipment will contribute considerably to operating efficiency and savory, appetizing food. Good equipment that is kept clean works better and lasts longer.



DANGER



DISCONNECT UNIT FROM POWER SOURCE BEFORE CLEANING OR SERVICING.


CAUTION



METAL PARTS OF THIS EQUIPMENT BECOME EXTREMELY HOT WHEN IN OPERATION. TO AVOID BURNS, ALWAYS USE HAND PROTECTION WHEN OPERATING THIS APPLIANCE.

CLEAN DAILY

1. Press the electrical power switch to the "OFF" position.
2. Allow rotisserie surfaces to cool.
3. Disconnect the rotisserie from the electrical power source.
4. Remove all detachable items such as spits and grease deflection trays. Drain grease from the drip pan and remove the drip pan from the oven when draining is complete.
5. Remove rotisserie drive assembly from the interior of the oven.
 - a. Supporting the central drive tube assembly, slide the metal washer and the collar on both sides of the drive tube toward the center of the tube to disengage.
 - b. Remove the disk drive wheels by pulling each directly toward the center of the oven compartment.
6. Wash all detached items separately in a ware washing area or sink. Do not use abrasive or corrosive cleaners. Only hot, soapy water is required for the optional Teflon® coated items.
7. Wipe the interior metal surfaces of the oven with a paper towel to remove loose food debris.
8. Clean interior with a damp cloth or sponge and any good commercial detergent at the recommended strength.
9. Spray heavily soiled areas with a water soluble degreaser and let stand for 10 minutes. After 10 minutes, remove soil with a plastic scouring pad.
10. Rinse surfaces thoroughly by wiping with sponge and clean, warm water
11. Remove excess water with sponge and wipe dry with a clean cloth or air dry. Leave door open until interior is completely dry. Always replace all removable parts including drip pan and grease deflection trays before operating.
12. Interior can be wiped with a sanitizing solution after cleaning and rinsing. This solution must be approved for use on stainless steel food contact surfaces.
13. Wipe control panel and door handle(s) thoroughly since these areas harbor food debris and bacteria. Dry the control panel dry with a clean, soft cloth.
14. To help maintain the protective film coating on polished stainless steel, clean the exterior of the cabinet with a cleaner recommended for stainless steel surfaces. Spray the cleaning agent on a clean cloth and wipe with the grain of the stainless steel. For optional color coated exterior surfaces, wipe with a damp cloth or sponge and wipe dry with a clean cloth.
15. Clean glass doors with a standard, commercial glass cleaner.

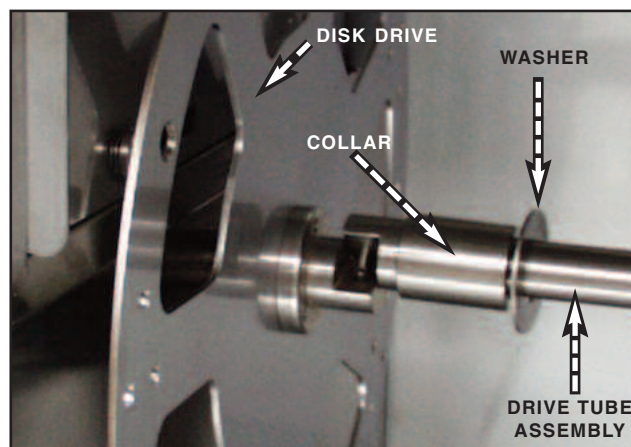

CAUTION



Always follow appropriate state or local health (hygiene) regulations regarding all applicable cleaning and sanitation requirements for equipment.

CARE AND CLEANING

DAILY GASKET CLEANING

It is important to prolong the life of the oven gasket by cleaning this item on a daily basis. The acids and related compounds found in fat, particularly chicken fat, will weaken the composition of the gasket unless cleaned on a daily basis.

Routine cleaning will help protect the composition of the gasket from deterioration caused by acidic foods. After allowing the oven to cool, remove pull-out gasket and wash in hot, soapy water. **Do not** place gasket in the dishwasher

CAUTION



ALWAYS REPLACE THE DOOR GASKET BEFORE CLEANING THE INTERIOR OR OPERATING THE APPLIANCE.



DANGER



DISCONNECT UNIT FROM POWER SOURCE BEFORE CLEANING OR SERVICING.



CLEAN CONVECTION BOX

Remove the screws holding the convection fan panel unto the inside of the cooking chamber. Using a commercial degreaser spray the back and front and allow the degreaser to soften the grease for 10 minutes. Using a plastic scouring pad, scrub any hard deposits and rinse with hot water.

Using a damp sponge and a plastic scouring pad if needed, wipe out any grease deposits that may be built up on the area surrounding the convection element and fan blade, taking care not to bend the element or the blade. A degreaser may be sprayed in this area to help dissolve any grease deposits that may be built up, but only a damp cloth or sponge can be used to remove the dissolved grease.

Reinstall fan panel and tighten screws finger tight.

UNIT MAY BE RUN AFTER CLEANING FOR 30-40 MINUTES TO AID IN DRYING, ALTHOUGH THERE MAY BE SOME SMOKING, WHICH IS NORMAL.

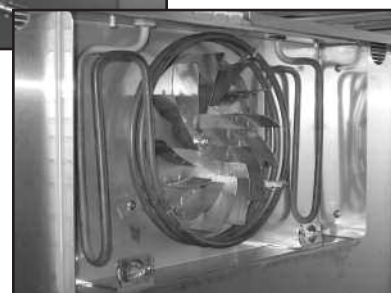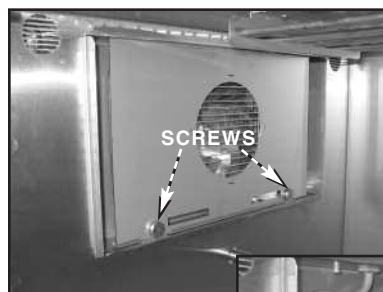

CHECK OVERALL CONDITION OF THE ROTISSERIE ONCE A MONTH

Check for physical damage and loose screws. Correct any problems before they begin to interfere with the operation of the oven.

DANGER



AT NO TIME SHOULD THE INTERIOR OR EXTERIOR BE STEAM CLEANED, HOSED DOWN, OR FLOODED WITH WATER OR LIQUID SOLUTION OF ANY KIND. DO NOT USE WATER JET TO CLEAN.



SEVERE DAMAGE OR ELECTRICAL HAZARD COULD RESULT.

WARRANTY BECOMES VOID IF APPLIANCE IS FLOODED



CAUTION



TO PROTECT STAINLESS STEEL SURFACES, COMPLETELY AVOID THE USE OF ABRASIVE CLEANING COMPOUNDS, CHLORIDE BASED CLEANERS, OR CLEANERS CONTAINING QUATERNARY SALTS. NEVER USE HYDROCHLORIC ACID (MURIATIC ACID) ON STAINLESS STEEL. NEVER USE WIRE BRUSHES, METAL SCOURING PADS OR SCRAPERS.

SERVICE

TROUBLESHOOTING GUIDE

| ERROR CODE | DESCRIPTION/RESULTS | POSSIBLE CAUSE SERVICE REQUIRED |
|-------------|---|--|
| E-10 | Air Sensor Fault (shorted) <i>Inoperative Oven</i> | Air sensor defective? <u>AIR SENSOR TEST</u> Test air sensor by placing sensor in ice water bath. Use an ohm meter set on the ohm scale. The reading should be 100 ohms resistance. The sensor must be replaced if the reading is more than 2 ohms higher or lower. |
| E-11 | Air Sensor Fault (open) <i>Inoperative Oven</i> | |
| E-30 | Under Temperature <i>Oven will shut down</i> | Door gasket need replacement? Preheating procedure skipped? Oven overloaded or frozen product used? Defective air sensor? |
| E-31 | Over Temperature <i>Oven will shut down</i> | Defective air sensor? <u>AIR SENSOR TEST</u> Test air sensor by placing sensor in ice water bath. Use an ohm meter set on the ohm scale. The reading should be 100 ohms resistance. The sensor must be replaced if the reading is more than 2 ohms higher or lower. |
| E-70 | Configuration Connector Error <i>Inoperative Oven</i> | Check control connections for loose wires. |
| E-78 | Voltage Low <i>Inoperative Oven</i> | If 208-240 VAC, voltage is below 190 VAC. Correct. |
| E-79 | Voltage High <i>Inoperative Oven</i> | If 208-240 VAC, voltage is over 250 VAC. Correct. |
| E-80 | EEPROM - Function Data Error <i>Inoperative Oven</i> | Contact factory for service. |
| E-82 | EEPROM - Calibration Data Error <i>Inoperative Oven</i> | Contact factory for service. |
| E-86 | EEPROM - Preset Data Error <i>Inoperative Oven</i> | Contact factory for service. |



DANGER



**LOCK-OUT OR POST
BREAKER PANEL UNTIL
SERVICE WORK HAS
BEEN COMPLETED.**



DANGER



**DISCONNECT UNIT FROM
POWER SOURCE BEFORE
CLEANING OR SERVICING.**

CAUTION

THIS SECTION IS PROVIDED FOR THE ASSISTANCE
OF QUALIFIED SERVICE TECHNICIANS ONLY AND
IS NOT INTENDED FOR USE BY UNTRAINED OR
UNAUTHORIZED SERVICE PERSONNEL.




DANGER




**ELECTRICAL CONNECTIONS MUST
BE MADE BY A QUALIFIED SERVICE
TECHNICIAN IN ACCORDANCE WITH
APPLICABLE ELECTRICAL CODES.**

FULL ASSEMBLY SERVICE VIEW

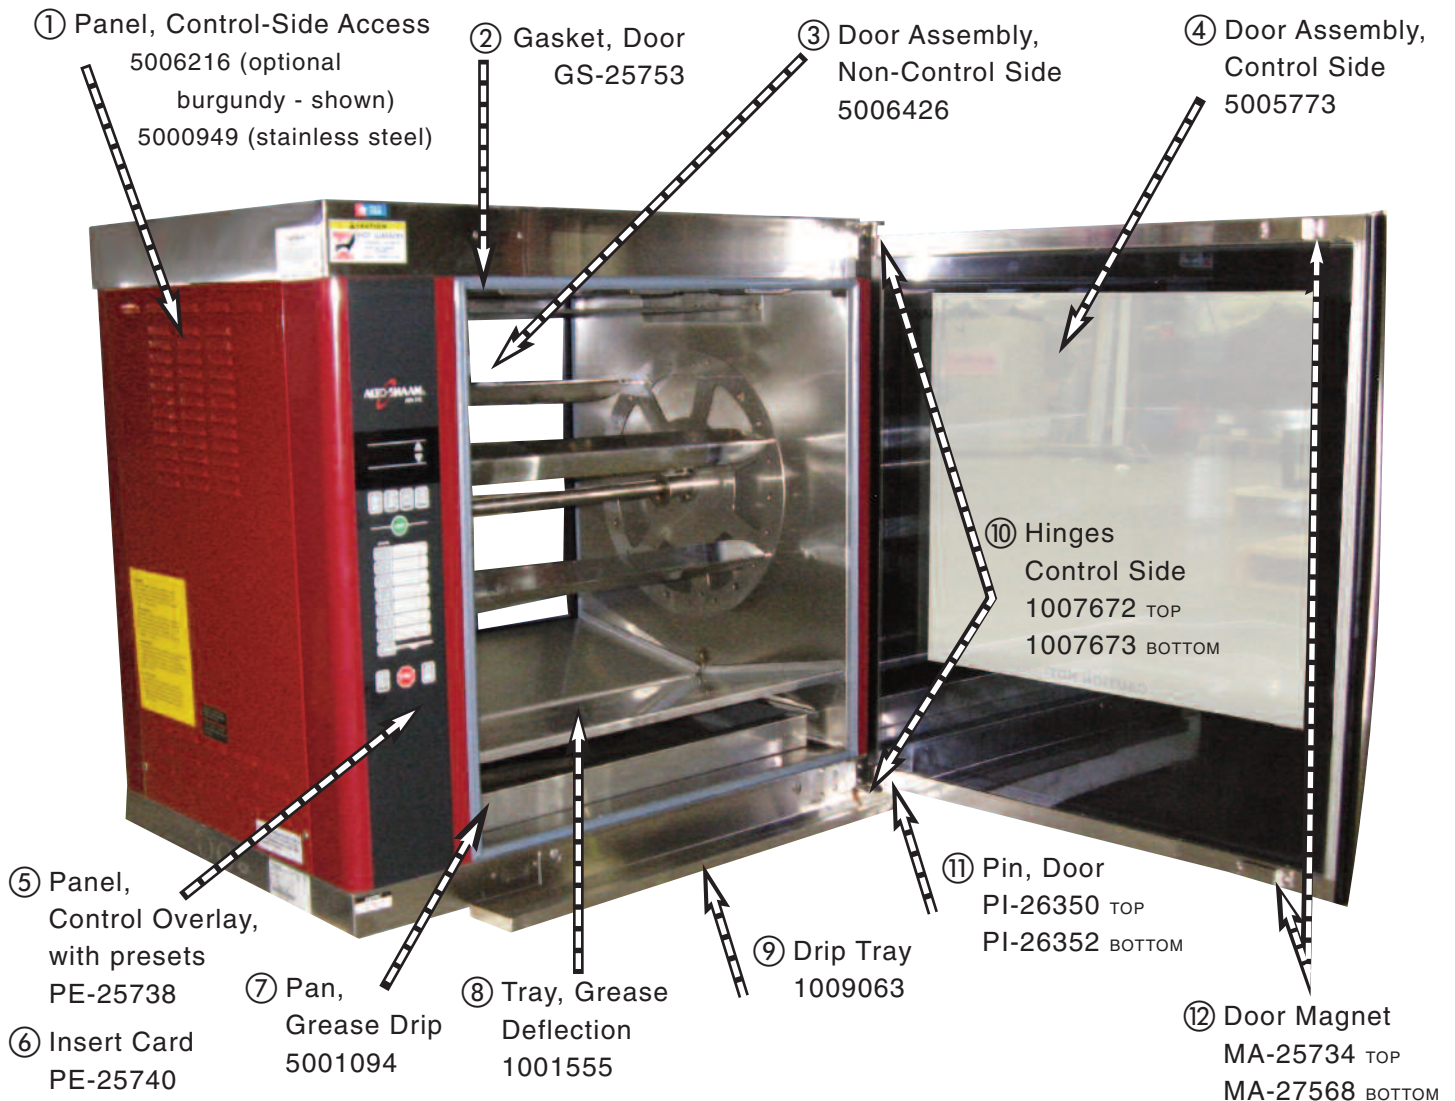

SERVICE

INTERIOR SERVICE VIEW

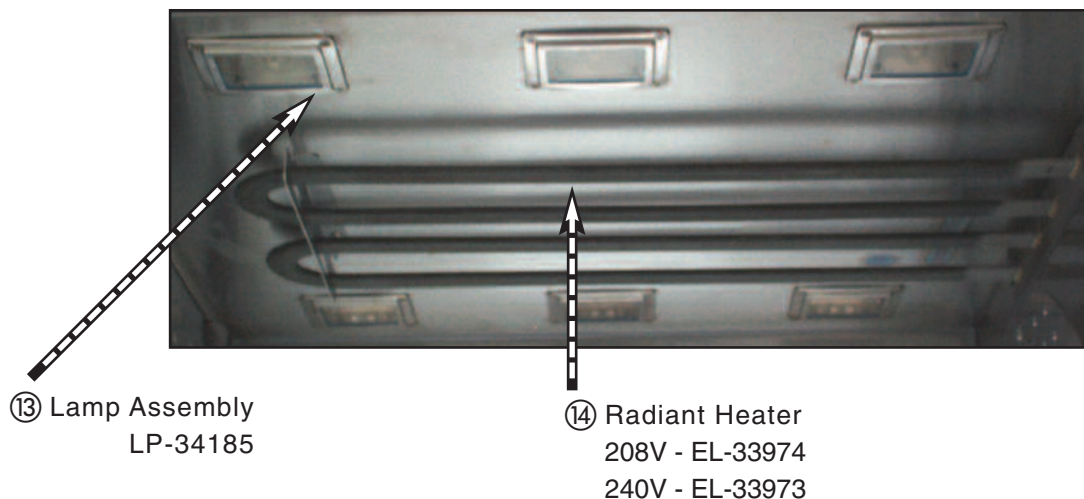

BULB REPLACEMENT INSTRUCTIONS




A

To Replace Bulbs:

- A Remove four screws holding glass light cover (CV-26607) and gasket (GS-26609) in place, taking care to not let the glass cover (GL-26608) fall into the oven.
- B Pull bulb out
- C Push replacement bulb (LP-34213) in place
- D Re-install glass cover and gasket, securing with four screws removed in step one.



B & C

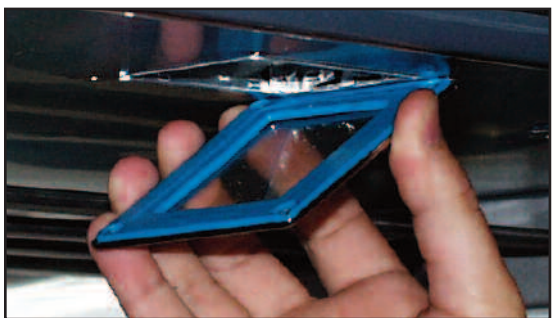

D

CAUTION




DO NOT HANDLE NEW BULB WITH BARE HANDS. WHITE COTTON GLOVES SHOULD BE WORN WHEN REPLACING BULBS.

CAUTION



The performance of this unit has been optimized using the factory provided bulbs. These bulbs should be replaced with an exact replacement or with a factory recommended replacement. These bulbs have been treated to resist breakage and must be replaced with similarly treated bulbs in order to maintain compliance with NSF standards. **DO NOT** over-tighten bulbs in their receptacles as this can cause damage to the bulb filament.

SERVICE VIEW 1

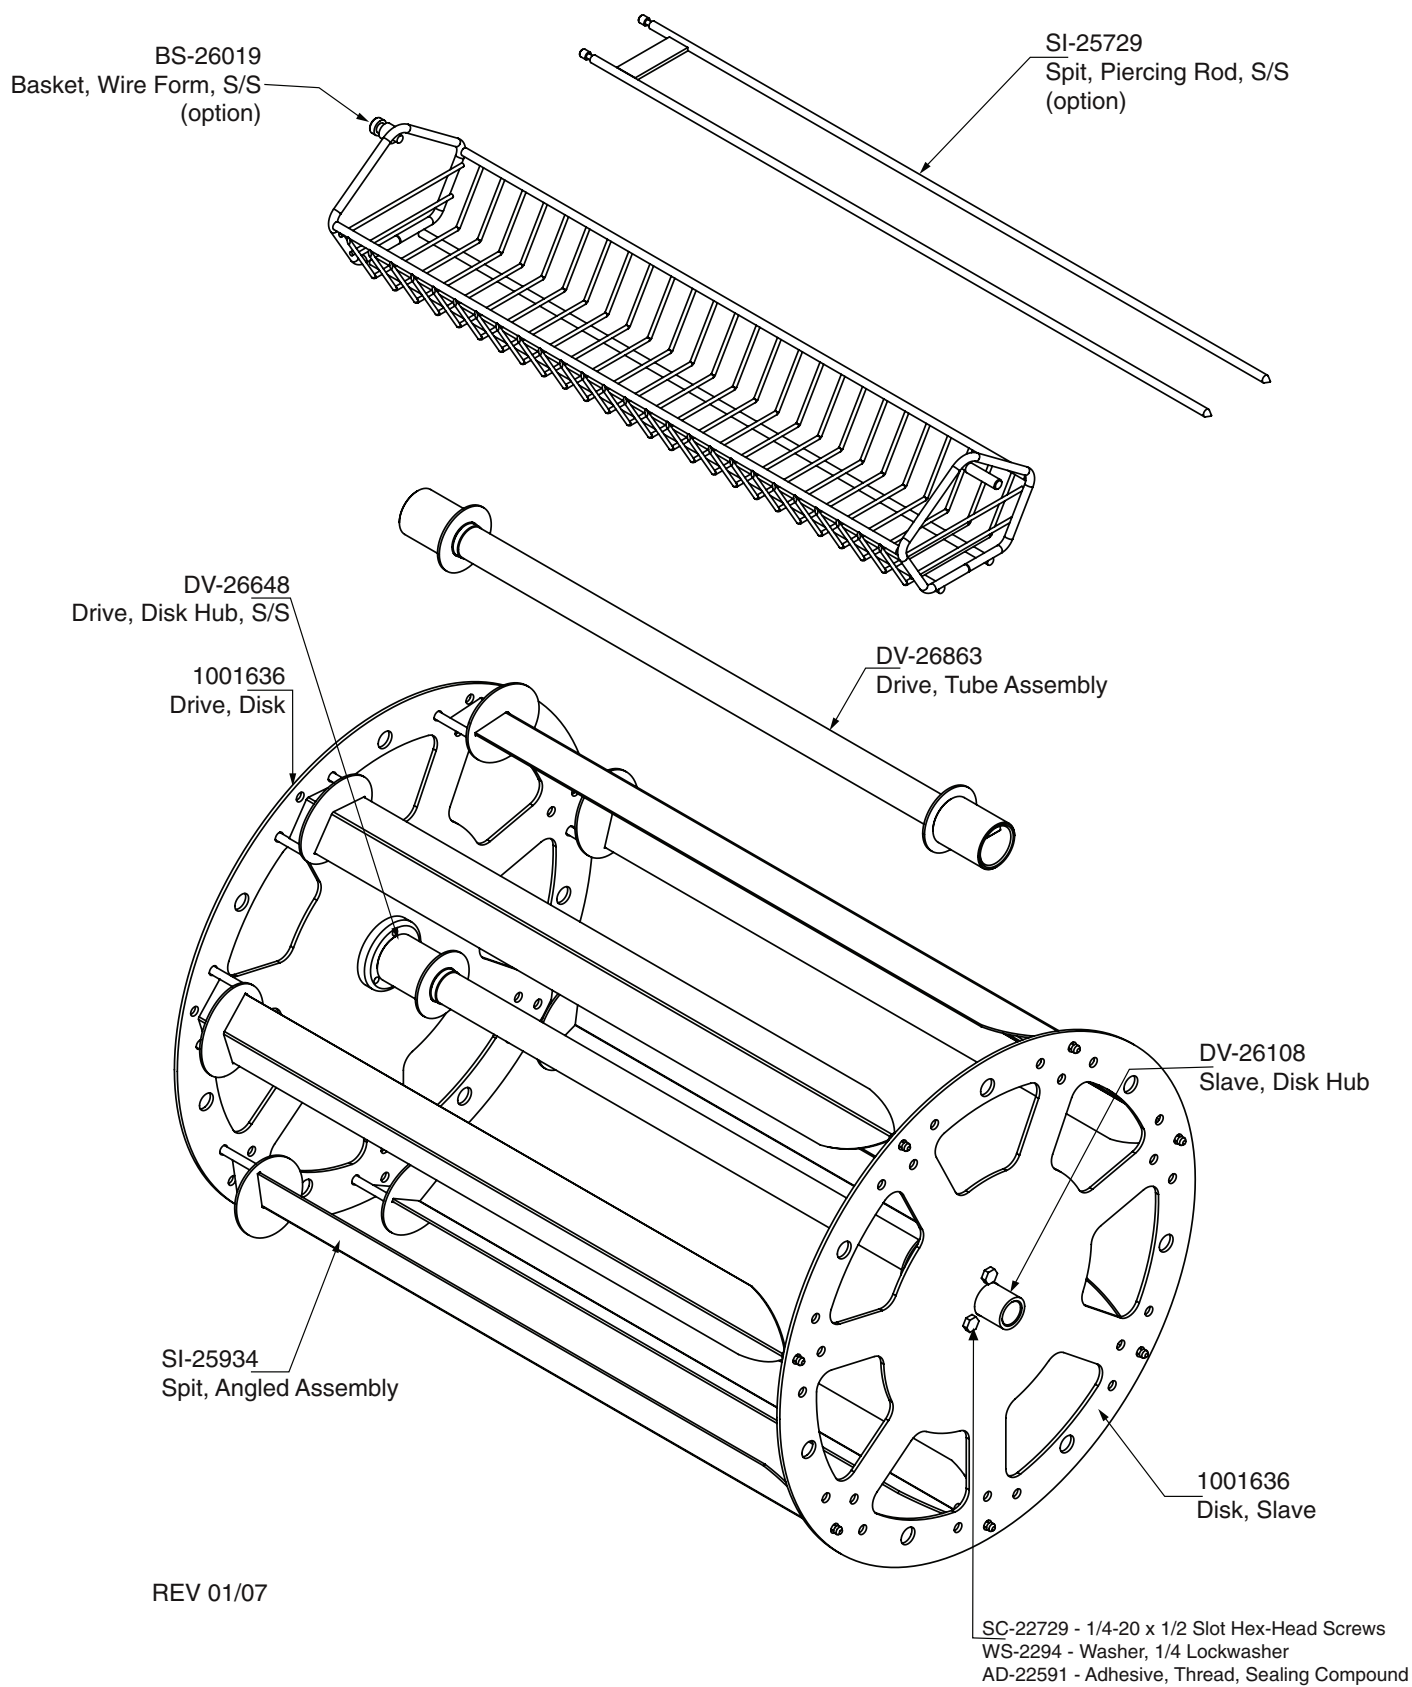

SERVICE

SERVICE VIEW 2: SINGLE PANE FLAT GLASS DOOR

WARNING







DO NOT ATTEMPT TO REMOVE THE DOOR WITHOUT ASSISTANCE. THE DOOR IS EXTREMELY HEAVY, WILL BE DAMAGED IF DROPPED, AND MAY CAUSE SERIOUS INJURY.

DOOR REPLACEMENT:

STEP 1: REMOVE TOP PIN (PI-26350) FROM BRACKET "A" USING A SMALL SCREWDRIVER.

STEP 2: ASSEMBLE DOOR ON UNIT WITH SPACERS AS SHOWN (DETAIL B).

STEP 3: MAKE CERTAIN DOOR IS ALIGNED AND REINSERT TOP PIN.

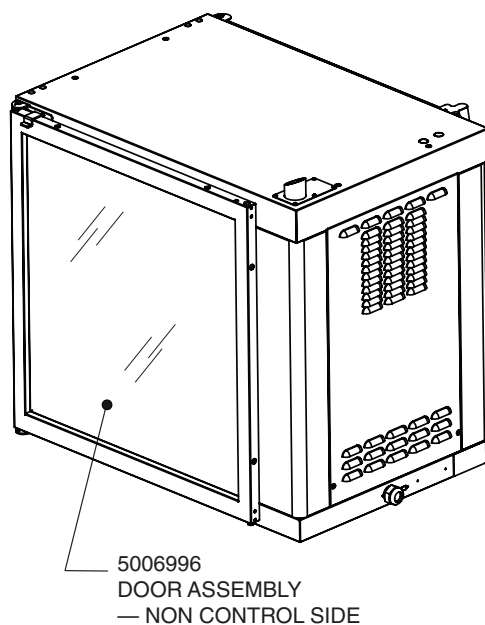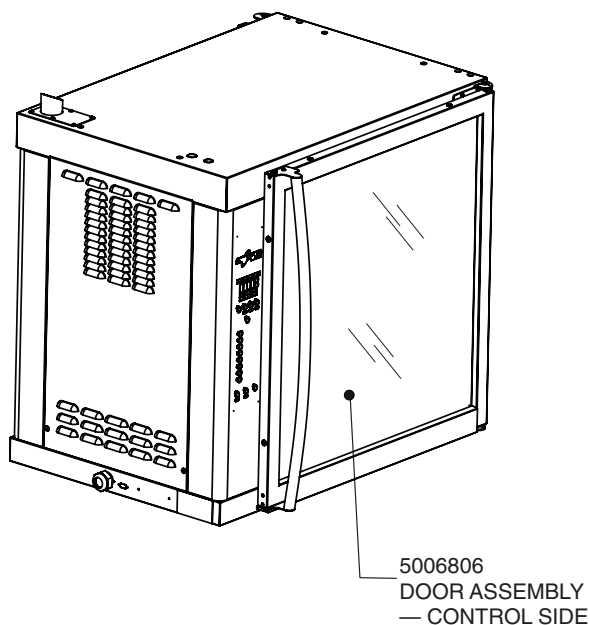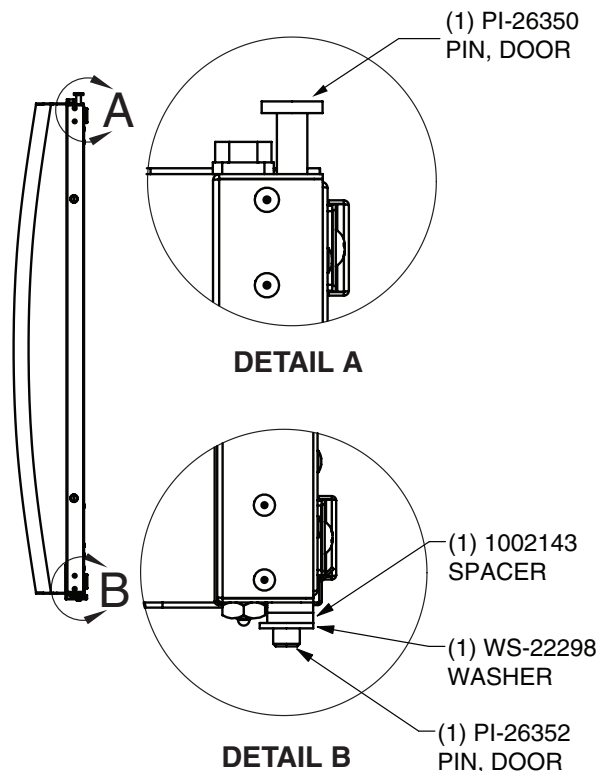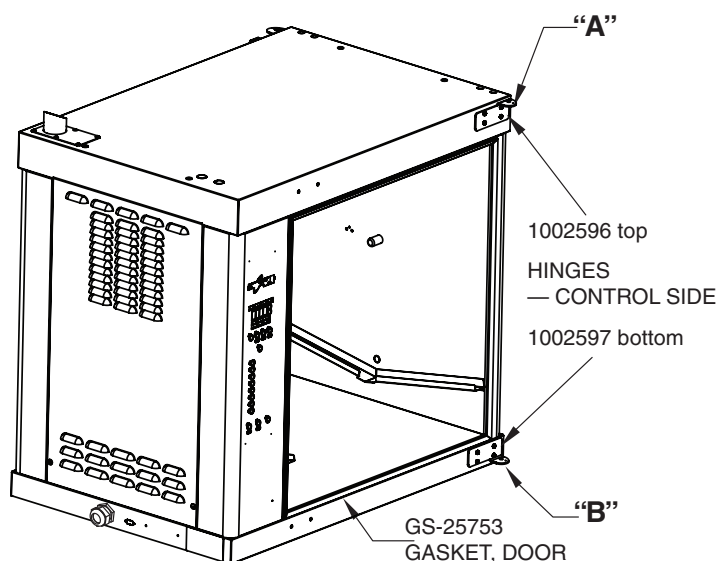


SERVICE VIEW 3: STAINLESS STEEL BACK PANEL

NOTE:

TO INSTALL A SOLID STAINLESS STEEL BACK PANEL, REMOVE GASKET AND ALL SCREWS ON INSTALLATION SIDE.

INSTRUCTIONS: Assembly # (5006214)

1. INSTALL 1006652 USING (16) SC-25849 SCREWS IN LOCATIONS MARKED "A."
2. INSTALL 1006746 INTO 1006652 USING (4) SC-27843 SCREWS (8) SC-2459 AND (4) 1002822 SPACERS.
3. SEAL COMPLETE PERIMETER OF OPENING WITH SILICONE.

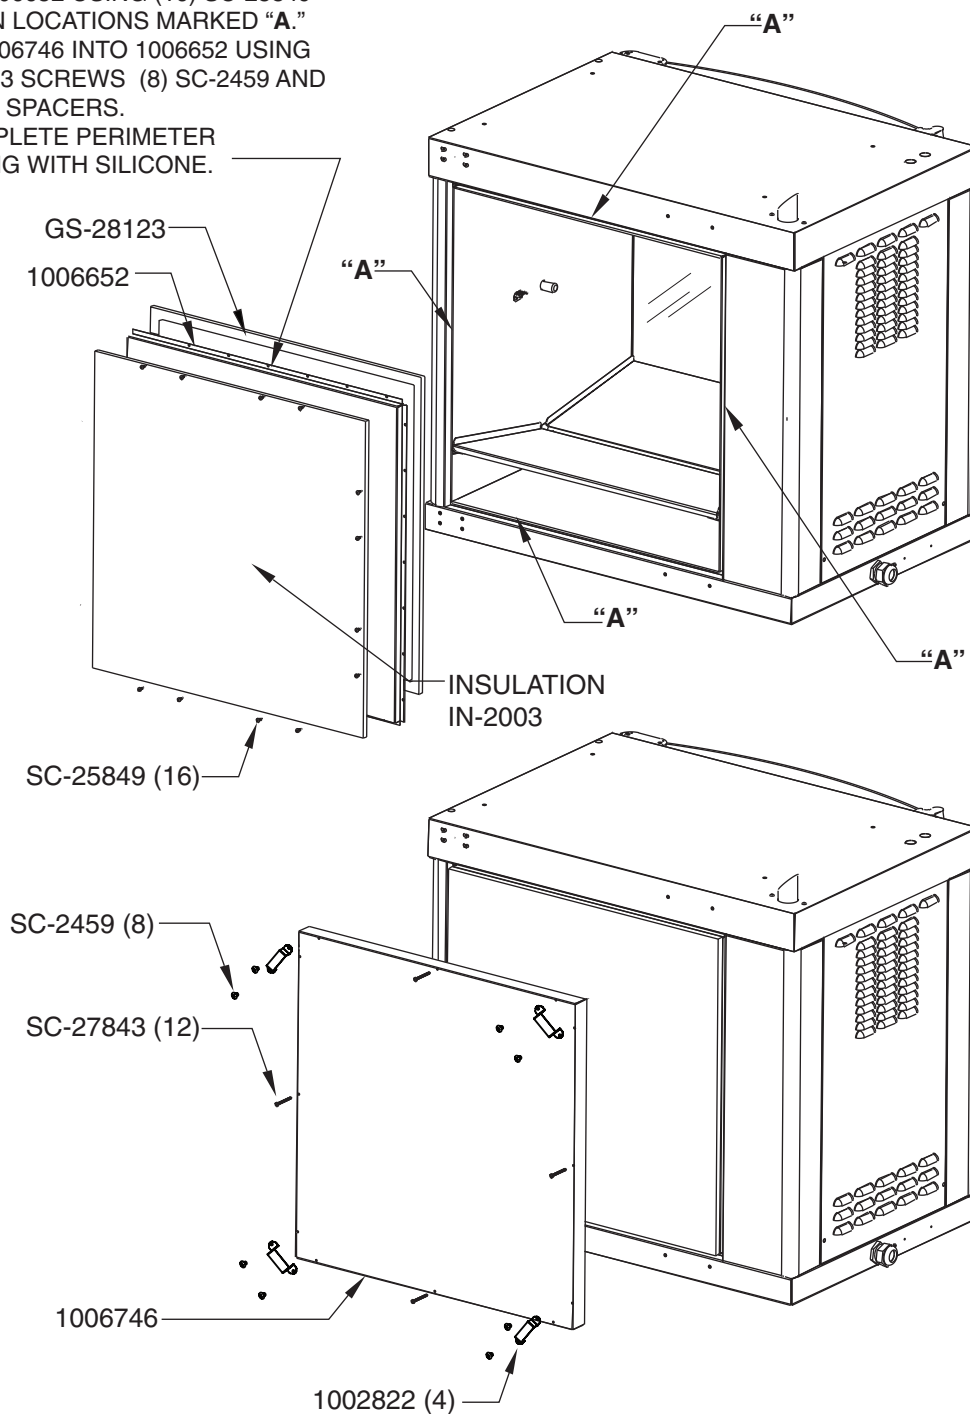

SERVICE

SERVICE VIEW 4: DOUBLE PANE CURVED GLASS DOOR

WARNING







DO NOT ATTEMPT TO REMOVE THE DOOR WITHOUT ASSISTANCE. THE DOOR IS EXTREMELY HEAVY, WILL BE DAMAGED IF DROPPED, AND MAY CAUSE SERIOUS INJURY.

DOOR REPLACEMENT:

STEP 1: REMOVE TOP PIN (PI-26350) FROM BRACKET "A" USING A SMALL SCREWDRIVER.

STEP 2: ASSEMBLE DOOR ON UNIT WITH SPACERS AS SHOWN (DETAIL B).

STEP 3: MAKE CERTAIN DOOR IS ALIGNED AND REINSERT TOP PIN.

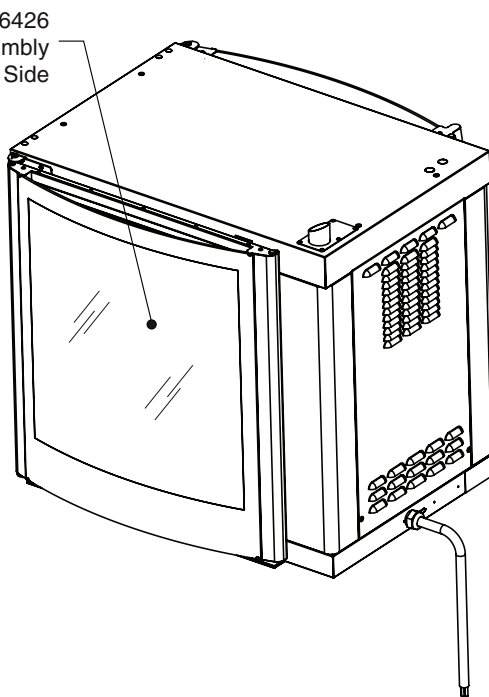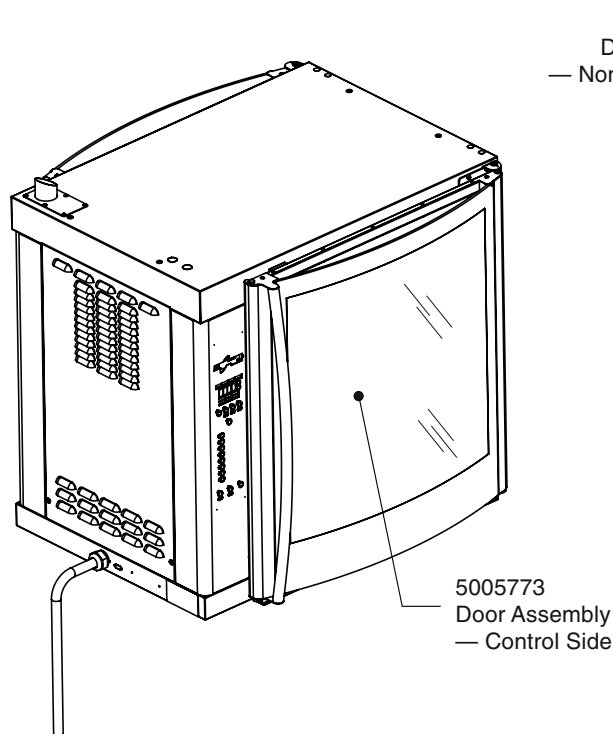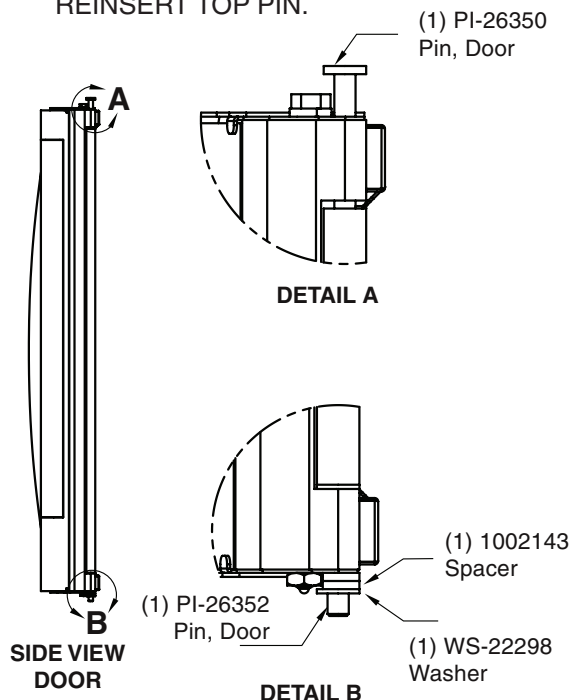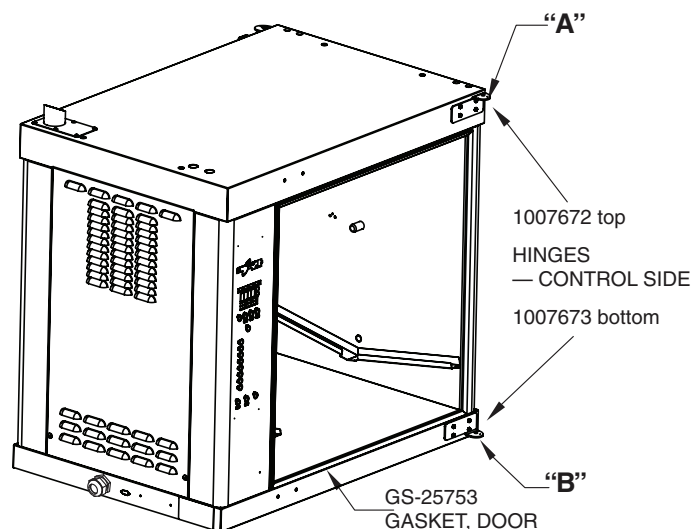


SERVICE VIEW 4A: DOUBLE PANE CURVED GLASS DOOR

FASTENERS REQUIRED

- (1) 1002143 WASHER, DOOR SPACE, BOTTOM
- (1) WS-22298 WASHER, FLAT, M8
- (3) SC-2900 SCREW, 5/16-18 x 5/8
- (1) PI-26350 PIN, DOOR, TOP
- (1) PI-26352 PIN, DOOR, BOTTOM
- (1) NU-25897 NUT, HEX JAM 5/16-18
- (1) SC-25781 SCREW, INSERT
- (6) SC-22378 SCREW, 8-32 x 3/8

**5006426 — DOOR ASSEMBLY
- NON-CONTROL SIDE**

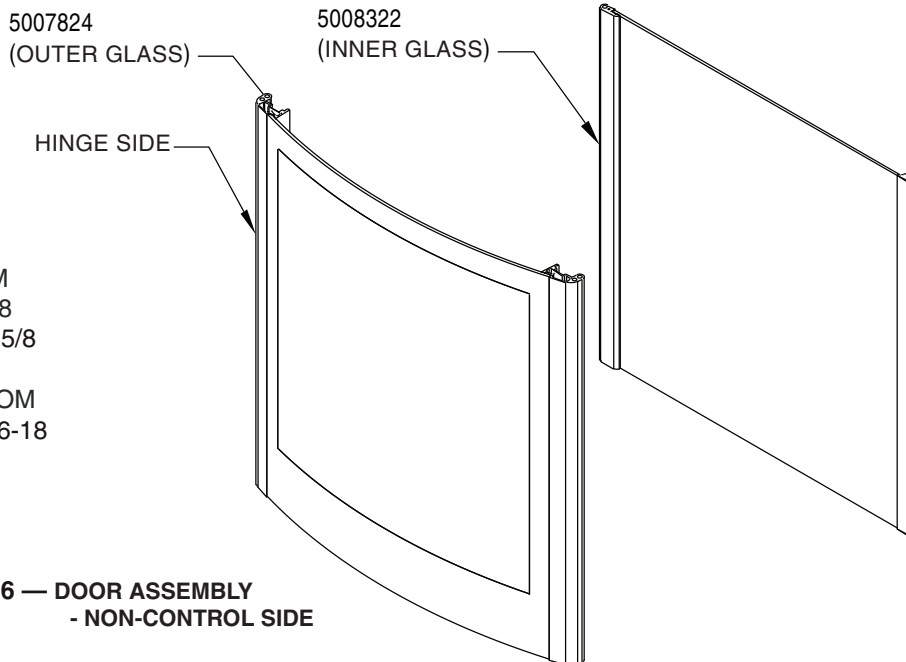


FASTENERS REQUIRED

- (1) 1002143 WASHER, DOOR SPACE, BOTTOM
- (1) WS-22298 WASHER, FLAT, M8
- (3) SC-2900 SCREW, 5/16-18 x 5/8
- (1) PI-26350 PIN, DOOR, TOP
- (1) PI-26352 PIN, DOOR, BOTTOM
- (1) NU-25897 NUT, HEX JAM 5/16-18
- (1) SC-25781 SCREW, INSERT
- (6) SC-22378 SCREW, 8-32 x 3/8

**HD-26900
(DOOR HANDLE)**


**5005773 — DOOR ASSEMBLY
- CONTROL SIDE**

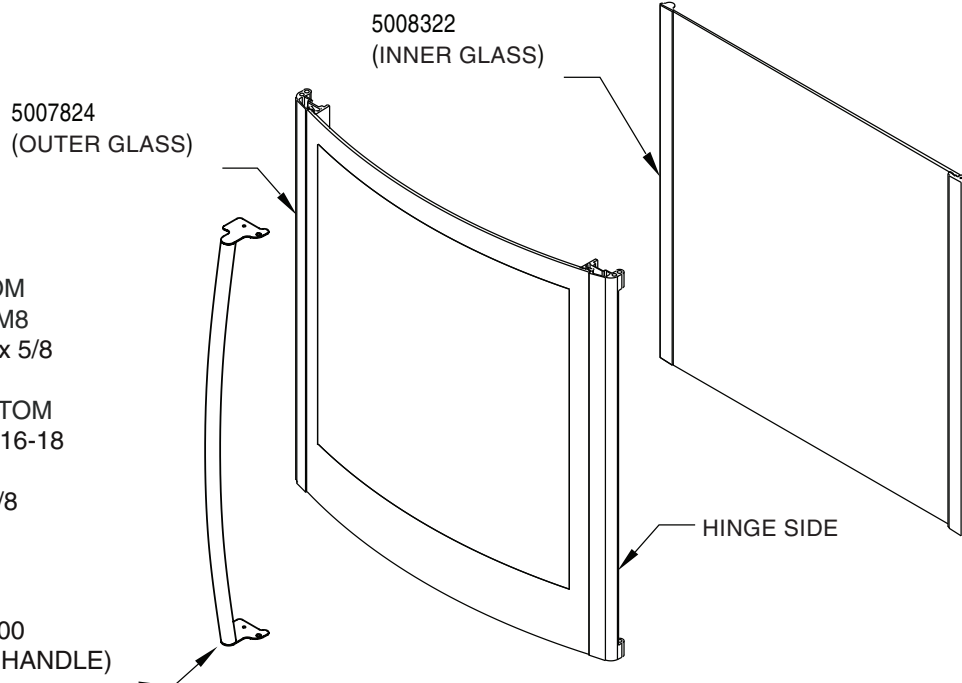


REV 02/09

SERVICE

SERVICE VIEW 5: ELECTRICAL

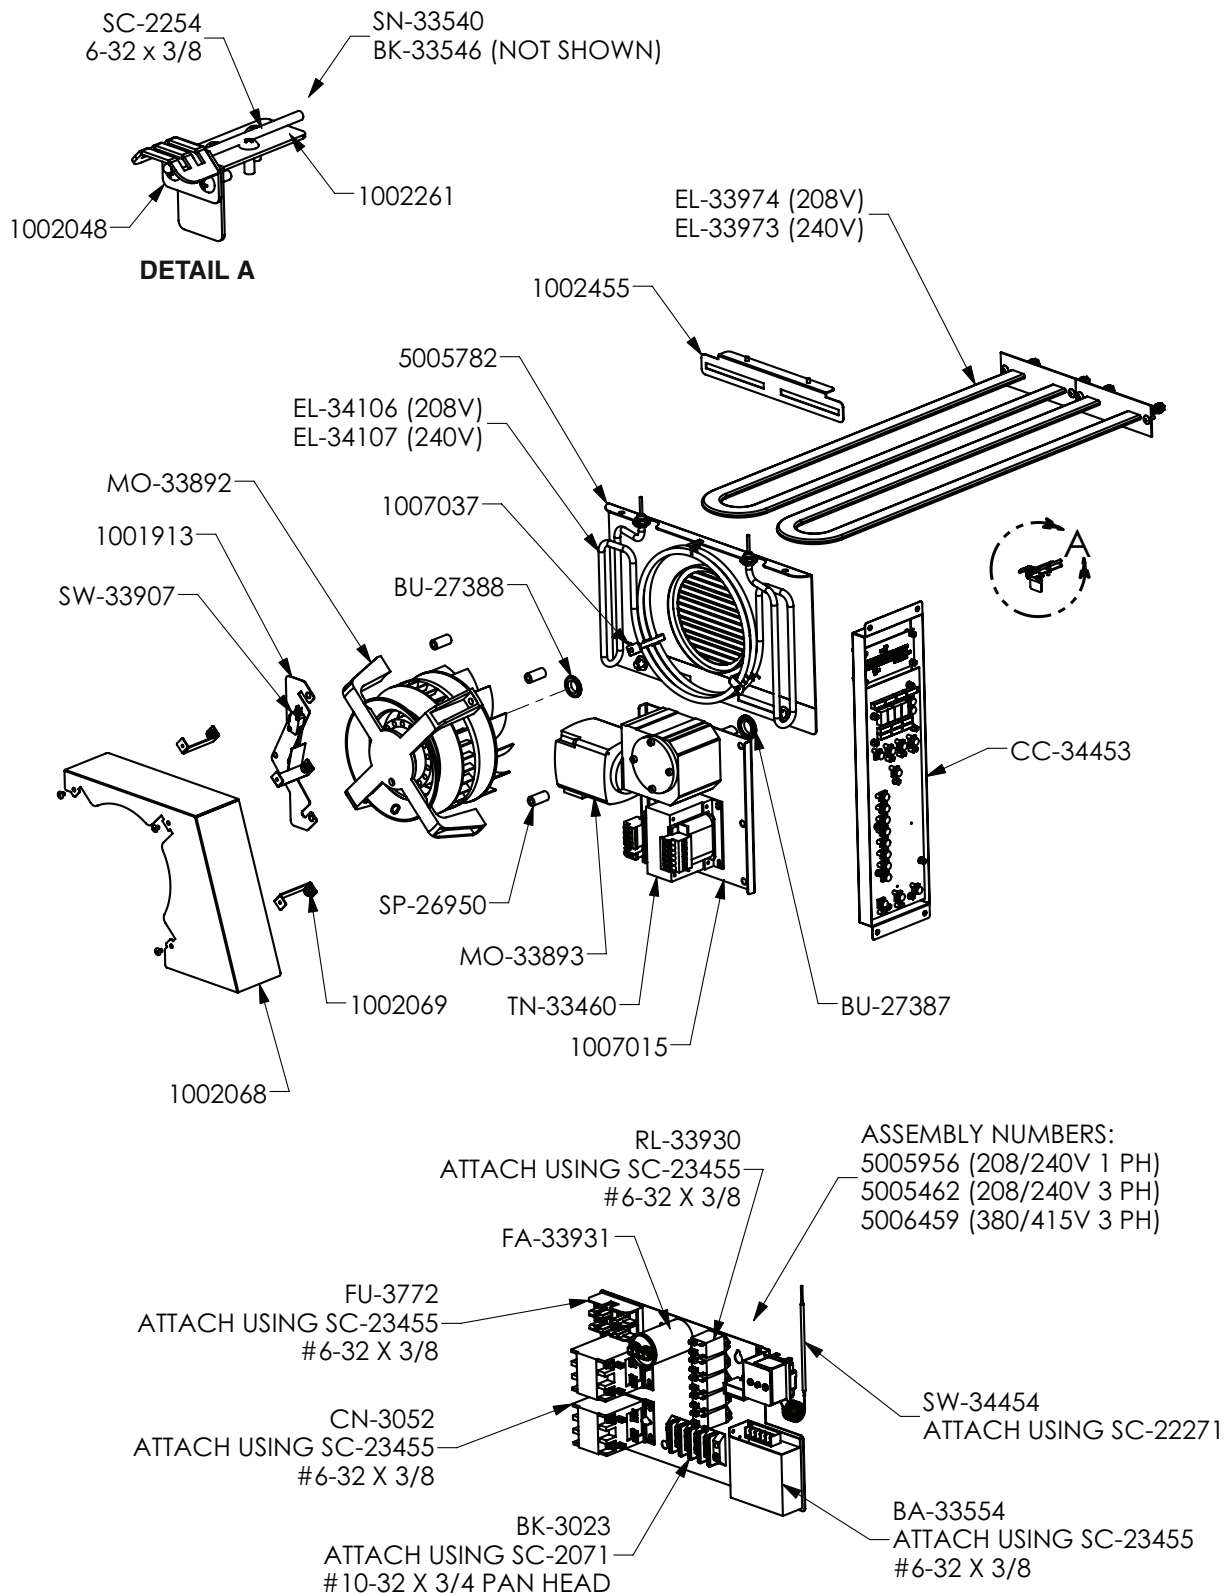

SERVICE VIEW 5A: ELECTRICAL

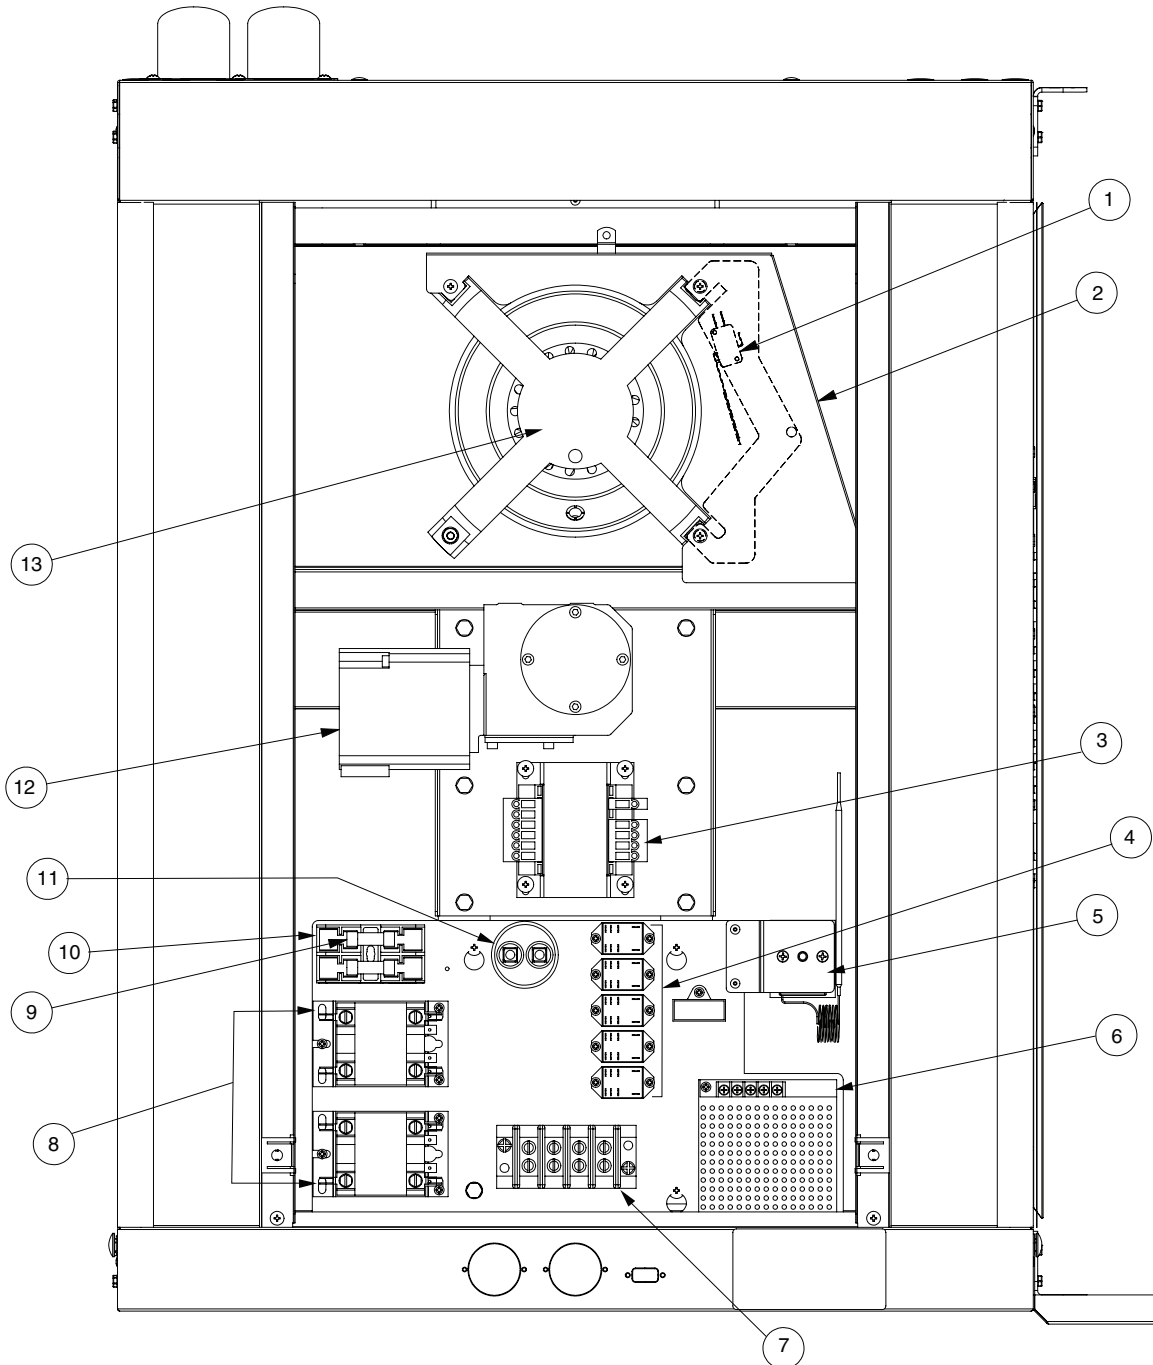

SERVICE

| PART DESCRIPTION | PART NO. | PART DESCRIPTION | PART NO. |
|--|--------------------|--|----------|
| FULL ASSEMBLY SERVICE VIEW | | SERVICE VIEW 2 AND 3: | |
| ① PANEL, CONTROL SIDE ACCESS | | DOOR ASSEMBLY, CONTROL SIDE, FLAT | 5006806 |
| STAINLESS STEEL 5000949 | | DOOR ASSEMBLY, NON-CONTROL SIDE, FLAT | 5006996 |
| BURGUNDY (OPTIONAL) 5000949 | | DOOR HINGES (NON-CONTROL HINGES NOT SHOWN) | |
| PANEL, NON-CONTROL SIDE ACCESS (NOT SHOWN) | | CONTROL SIDE, TOP; NON-CONTROL, BOTTOM | 1002596 |
| STAINLESS STEEL 1001585 | | CONTROL SIDE, BOTTOM; NON-CONTROL, TOP | 1002597 |
| BURGUNDY (OPTIONAL) 1007425 | | DOOR PIN, 5/16" x 3" DOWEL, TOP | PI-26350 |
| ② GASKET, DOOR | GS-25753 | DOOR PIN, 5/16" x 3" DOWEL, BOTTOM | PI-26352 |
| ③ DOOR ASSEMBLY, NON-CONTROL SIDE, CURVED | 5006426 | GASKET, DOOR | GS-25753 |
| ④ DOOR ASSEMBLY, CONTROL SIDE, CURVED | 5005773 | INSULATION, FIBERGLASS, 1/2" x 24" x 48" | IN-2003 |
| ⑤ PANEL, CONTROL OVERLAY WITH PRESETS | PE-25738 | PANEL, INTERIOR STAINLESS STEEL BACK | 1006652 |
| PANEL, CONTROL OVERLAY WITHOUT PRESETS | PE-25869 | PANEL, EXTERIOR STAINLESS STEEL BACK | 1006746 |
| ⑥ INSERT CARD | PE-25740 | SCREW, HEX CAP, 5/16-18 x 1" | SC-2191 |
| ⑦ PAN, GREASE WITHOUT DRAIN (NOT SHOWN) | 1001976 | SCREW, INSERT WITH SPRING LOADED BALL | SC-25781 |
| PAN, GREASE WITH DRAIN | 5001094 | SCREW, NC PHIL TRUSS, 8-32 x 3/8" | SC-22378 |
| ⑧ TRAY, GREASE DEFLECTION | 1001555 | WASHER, DOOR SPACER, TOP / BOTTOM | 1002143 |
| ⑨ DRIP TRAY (OPTIONAL) | 1009063 | WASHER, FLAT [*CT, M8] | WS-22298 |
| ⑩ DOOR HINGES (NON-CONTROL HINGES NOT SHOWN) | | SERVICE VIEW 4 AND 4A: | |
| CONTROL SIDE, TOP; NON-CONTROL, BOTTOM | 1007672 | DOOR ASSEMBLY, CONTROL SIDE | 5005773 |
| CONTROL SIDE, BOTTOM; NON-CONTROL, TOP | 1007673 | DOOR ASSEMBLY, NON-CONTROL SIDE | 5006426 |
| ⑪ PIN, DOOR, TOP | PI-26350 | DOOR HINGES (NON-CONTROL HINGES NOT SHOWN) | |
| PIN, DOOR, BOTTOM | PI-26352 | CONTROL SIDE, TOP; NON-CONTROL, BOTTOM | 1007672 |
| ⑫ DOOR MAGNET TOP | MA-25734 | CONTROL SIDE, BOTTOM; NON-CONTROL, TOP | 1007673 |
| DOOR MAGNET, BOTTOM | MA-27568 | DOOR PIN, TOP | PI-26350 |
| ⑬ LAMP ASSEMBLY, 12VAC, 20W W/ HALOGEN BULB | LP-34185 | DOOR PIN, BOTTOM | PI-26352 |
| REPLACEMENT BULBS | LP-34213 | GASKET, DOOR | GS-25753 |
| ⑭ RADIANT HEATERS | SEE SERVICE VIEW 5 | GLASS, OUTER | 5007824 |
| SERVICE VIEW 1: | | GLASS, INNER | 5008322 |
| ADHESIVE, THREAD, SEALING COMPOUND | AD-22591 | NUT, HEX JAM, 5/16-18 | NU-25897 |
| BASKET, STAINLESS STEEL WIRE (OPTION) | BS-26019 | SCREW, HEX CAP, 5/16-18 x 1" | SC-2900 |
| DRIVE, DISK & DISK SLAVE | 1001636 | SCREW, INSERT WITH SPRING LOADED BALL | SC-25781 |
| DRIVE, DISK HUB, STAINLESS STEEL | DV-26648 | SCREW, NC PHIL TRUSS, 8-32 x 3/8" | SC-22378 |
| DRIVE SLAVE, DISK HUB, STAINLESS STEEL | DV-26108 | WASHER, DOOR SPACER, TOP / BOTTOM | 1002143 |
| DRIVE, BEARING BRACKET ASSEMBLY (NOT SHOWN) | 5000967 | WASHER, FLAT [*CT, M8] | WS-22298 |
| — WASTER, BEARING MOUNT | 1001643 | | |
| — BEARING, DRIVE SUPPORT | BG-25716 | | |
| — SCREW, 1/4-20X1, HEX C | SC-22144 | | |
| — WASHER, 1/4", LOCKWASH | WS-2294 | | |
| DRIVE, TUBE ASSEMBLY | DV-26863 | | |
| SCREW, HEX HEAD SLOT 1/4-20 x 1/2 | SC-22729 | | |
| SPIT, ANGLED | SI-25934 | | |
| SPIT, PIERCING (OPTION) | SI-25729 | | |
| WASHER, 1/4" LOCKWASHER | WS-2294 | | |

| PART DESCRIPTION | PART NO. | PART DESCRIPTION | PART NO. |
|--|----------|--|----------|
| SERVICE VIEW 5: | | SERVICE VIEW 5A: | |
| AIR DUCT | 1002068 | ① SWITCH, FAN FAIL | SW-33907 |
| AIR DUCT MOUNTING BRACKET | 1002069 | ② AIR DUCT | 1002068 |
| BEARING BRACKET ASSEMBLY | 5000967 | ③ TRANSFORMER | TN-33460 |
| BLOWER COVER | 5005782 | ④ RELAY, POWER | RL-33930 |
| BOARD, POWER SUPPLY, 12V DC, SWITCH | BA-33554 | ⑤ SWITCH, HIGH LIMIT | SW-34454 |
| CONTROL ASSEMBLY, ELECTRIC | CC-34453 | ⑥ BOARD, POWER SUPPLY, 12V DC, SWITCH | BA-33554 |
| CONTACTOR, 208/240V, 3 POLE 25 AMP (2) | CN-3052 | ⑦ TERMINAL BLOCK | BK-3023 |
| ELEMENT, AIR HEAT, 208V, 5000W | EL-34106 | ⑧ CONTACTOR, 208/240V, 3 POLE 25 AMP (2) | CN-3052 |
| ELEMENT, AIR HEAT, 240V, 5500W | EL-34107 | RESISTOR, MOV, SURGE PROTECTOR (NOT SHOWN) | RS-3578 |
| ELEMENT BRACKET, AIR HEAT | 1007037 | ⑨ FUSE | FU-3775 |
| ELEMENT BRACKET, AIR HEAT | 1003595 | ⑩ FUSEHOLDER, 15A, CLASS G | FU-3772 |
| FAN, BLOWER MOTOR CAPACITOR, 4 UF | FA-33931 | ⑪ FAN, BLOWER MOTOR CAPACITOR, 4 UF | FA-33931 |
| FUSE | FU-3775 | ⑫ MOTOR DRIVE, 230V, AC | MO-33893 |
| FUSEHOLDER, 15A, CLASS G | FU-3772 | ⑬ MOTOR, CONVECTION FAN, 220-240V | MO-33892 |
| HEATER, CE (INTERNATIONAL ONLY) | EL-33970 | ELECTRICAL: | |
| HEATER, RADIANT, 208V | EL-33974 | CONTROL BEEPER | BP-3567 |
| HEATER, RADIANT, 240V | EL-33973 | CONNECTOR | CR-33763 |
| HEATER BAR BRACKET | 1002455 | CONNECTOR | CR-33761 |
| MOTOR BLOWER SEAL, TEFLON® | BU-27388 | CONNECTOR | CR-33762 |
| MOTOR BRACKET | 1007015 | CONNECTOR | CR-33717 |
| MOTOR, CONVECTION FAN, 220-240V | MO-33892 | CONNECTOR | CR-33719 |
| MOTOR DRIVE, 230V, AC | MO-33893 | RESISTOR, MOV, SURGE PROTECTOR | RS-3578 |
| MOTOR DRIVE SEAL, TEFLON® | BU-27387 | SWITCH, DOOR | SW-33906 |
| RELAY, POWER | RL-33930 | | |
| SCREW, NC PHIL TRUSS, 8-32-32-3/8 | SC-22378 | | |
| SCREW, #6-32 x 3/8 | SC-23455 | | |
| SCREW, #6-32 x 1-1/4 | SC-2365 | | |
| SENSOR, AMBIENT TEMPERATURE | SN-33540 | | |
| SENSOR CLIP | 1002261 | | |
| SENSOR GUARD | 1002048 | | |
| SWITCH, FAN FAIL | SW-33907 | | |
| SWITCH BRACKET, FAN FAIL | 1001913 | | |
| SWITCH, HIGH LIMIT | SW-34454 | | |
| TERMINAL BLOCK | BK-3023 | | |
| TERMINAL BLOCK, PORCELAIN (NOT SHOWN) | BK-33546 | | |
| TRANSFORMER | TN-33460 | | |

VENTLESS HOOD

UNPACKING & SET-UP

The Alto-Shaam Ventless Hood has been thoroughly tested and inspected to ensure only the highest quality unit is provided. When you receive your hood, check for any possible shipping damage and report it at once to the delivering carrier.


Save all the information and instructions packed inside the carton. Complete and return the warranty card to the factory as soon as possible to assure prompt service in the event of a warranty parts and labor claim.

NOTE: All claims for warranty must include the full model number and serial number of the hood.

ELECTRICAL CONNECTION

1. An identification tag is permanently mounted on the base of the unit.
2. The interconnect cord from the ventless hood to the rotisserie oven provides full power connection.

HOOD OPERATION

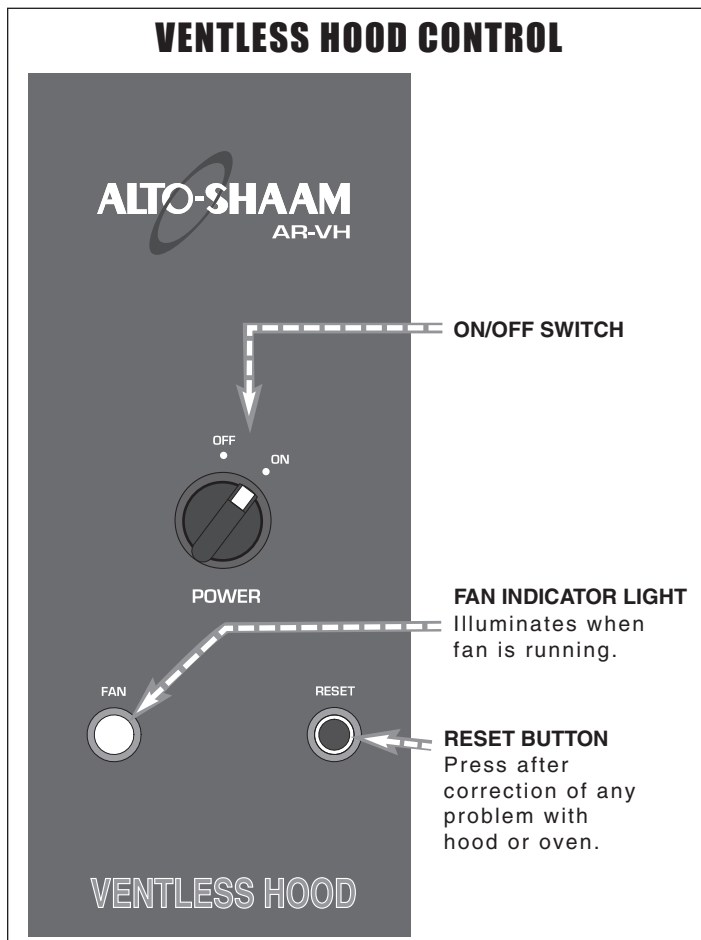

The Ventless Hood is factory installed directly on the top of the Alto-Shaam® Rotisserie oven. The hood is designed to vent clean air back into the kitchen, filtering vapors and grease. A high-power fan draws fumes and steam into the hood intake and out the top surface exhaust vent. Fumes and vapors are circulated through filters. An activated charcoal filter cleans the air before venting it out the top of the hood.

Turn the ventless hood ON before operating the rotisserie oven. There are a number of safety features incorporated into the operation of the hood which are directly related to the interaction of hood function and the operation of the rotisserie oven.

VENTLESS HOOD INTERLOCK SWITCHES

— CHARCOAL FILTER SWITCH

GREASE FILTER SWITCH

Prevents both hood and oven operation if any filter is not in place or is improperly installed.

- FAN PRESSURE SWITCH: Prevents rotisserie oven operation if hood fan is not operating or if the filters are more than 25% blocked.

RESET SWITCH

- The Reset has to be used if the rotisserie oven is turned on before the hood or if the hood was opened. It resets the pressure switch circuit and provides power to the rotisserie control circuit. This switch must also be used to reset hood controls after any problem with the filters. See illustrations on following pages of this manual.

NOTE: If the filters are dirty or in need of replacement the hood will not reset and the rotisserie will not operate until they have been cleaned and/or replaced.

VENTLESS HOOD

HOOD CLEANING & MAINTENANCE

To ensure optimum performance from the ventless hood, it is important to establish and maintain a regular cleaning and maintenance schedule. Use of the cleaning and maintenance reminder form located in this manual is highly recommended.



Access to the internal components, safety switches, filters, etc., are gained by opening the access door. A metal grease filter and charcoal filter are located immediately inside the hood access door.

To help maintain the protective film coating on polished stainless steel, clean the exterior of the cabinet with a cleaner recommended for stainless steel surfaces. Spray the cleaning agent on a clean cloth and wipe with the grain of the stainless steel.

NOTE: Never use hydrochloric acid (muriatic acid) on stainless steel.


ATTENTION

HOOD AND ROTISSERIE WILL NOT OPERATE UNLESS FILTERS ARE IN PLACE.

CHARCOAL FILTER

The charcoal (odor and pollution control filter) is located immediately inside the hood access door. The charcoal filter should be inspected for contaminants on a regular basis. **Replacement must be made at a minimum of three-month intervals — more often if heavy contaminants are visible or if the filter no longer controls odors.** To remove the filter, grasp on both ends and pull out from either side of the hood.

WHEN REPLACING THE FILTER, MAKE CERTAIN THE AIR FLOW ARROW POINTS TOWARD THE HOOD FAN. MAKE CERTAIN THE FILTER IS REPLACED IN THE FOUR-SIDED METAL FRAME PROVIDED WITH THE HOOD.

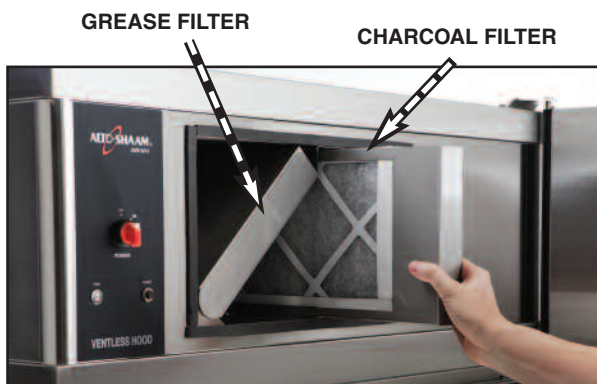

DANGER



AT NO TIME SHOULD THE INTERIOR OR EXTERIOR BE STEAM CLEANED, HOSED DOWN, OR FLOODED WITH WATER OR LIQUID SOLUTION OF ANY KIND. DO NOT USE WATER JET TO CLEAN.



SEVERE DAMAGE OR ELECTRICAL HAZARD COULD RESULT.

WARRANTY BECOMES VOID IF APPLIANCE IS FLOODED



DANGER




DISCONNECT UNIT FROM POWER SOURCE BEFORE CLEANING OR SERVICING.

GREASE FILTERS & METAL HOUSING (PLENUM)

The metal grease filter is located immediately inside the hood. Cleaning frequency should be based on oven usage. Grease-laden products such as red meat, poultry, etc., require cleaning frequency of at least once a week.

Remove the grease filter by pulling it straight out of the housing from either side. Place the filter in the dishwasher or wash separately by placing in hot, soapy water until all grease and particles have been removed. Rinse thoroughly. Allow the filter to air dry before reinstalling.

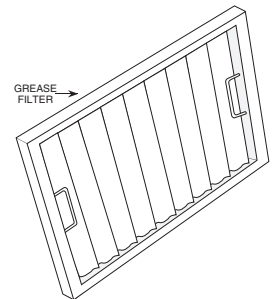


Clean the interior metal housing (plenum) with a damp cloth and any good commercial detergent or grease solvent at the recommended strength. Avoid the use of abrasive cleaning compounds, chloride-based cleaners, or cleaners containing quaternary salts. Use a degreasing agent if necessary.

CAUTION


THE EDGES INSIDE THE HOOD HOUSING CAN BE SHARP. USE CAUTION WHEN REMOVING OR REPLACING FILTERS.

VENTLESS HOOD - SERVICE

FINAL FLOOR (RIGHT HAND SHOWN)

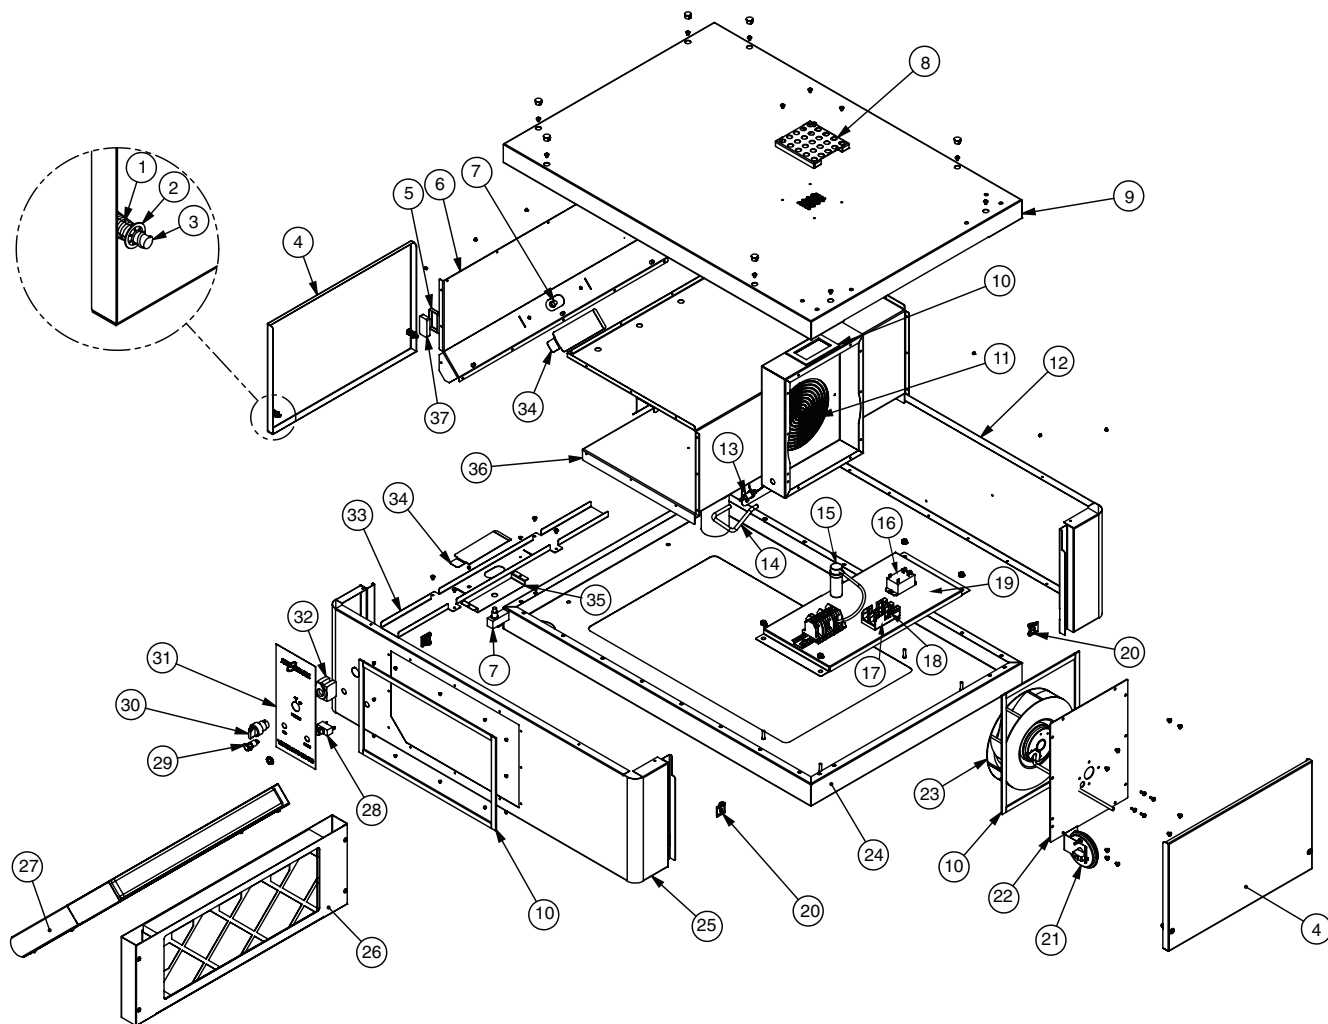

ELECTRICAL ASSEMBLY (CLOSEUP - 5008919)

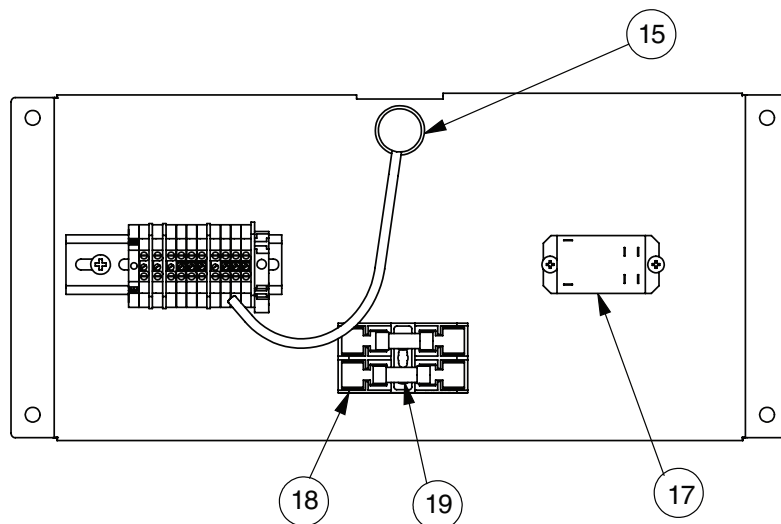


VENTLESS HOOD - SERVICE

*NOT SHOWN

| ITEM | DESCRIPTION | PART NO. | QTY | |
|------|----------------------------------|------------|---------|---|
| 1 | SPRING, CT M6x48, SAFETY | SD-22194 | 4 | |
| 2 | WASHER, SAFETY, STEEL | WS-22195 | 4 | |
| 3 | STUD, CT M6x27MM, 1/4 TURN | ST-22193 | 4 | |
| 4 | COVER, SIDE | 1007843 | 2 | |
| 5 | BRACKET, MAGNET, DOOR | 1009532 | 1 | |
| 6 | ASSEMBLY, SPOT, PANEL, WALL | RIGHT HAND | 5009510 | 1 |
| | LEFT HAND* | 5009187 | 1 | |
| 7 | SWITCH, CT, SNAP ACTION, VHC'S | SW-33148 | 2 | |
| 8 | HOUSING, DEFLECTOR, EXHAUST | 1010387 | 1 | |
| 9 | COVER, TOP | 1007841 | 1 | |
| 10 | TAPE, VHB, FOAM, 1/2"x72YD | GS-2019 | 9 | |
| 11 | SCREEN, FAN | 1002412 | 1 | |
| 12 | PANEL, NON-CONTROL SIDE | RIGHT HAND | 1008460 | 1 |
| | LEFT HAND* | 1010127 | 1 | |
| 13 | FITTING, CT WITH HOSE BARB PANEL | FT-24182 | 1 | |
| 14 | TUBINGS, CT, NORPRENE | TU-24183 | 1 | |
| 15 | FANS, CT, CAPACITOR, 2MFD | FA-33440 | 1 | |
| 16 | RELAY, POWER PANEL MOUNT | RL-33493 | 1 | |
| 17 | FUSE HOLDER, DUAL, 15A CLASS G | FU-3772 | 1 | |
| 18 | FUSE, 15A CLASS G | FU-3775 | 2 | |
| 19 | ELECTRONIC COMPONENT ASSEMBLY | 5008919 | 1 | |
| 20 | CLIP, CT HOLDING, M6 | CL-22196 | 4 | |
| 21 | CT PRESSURE 29" VHC | SW-33538 | 1 | |
| 22 | PLATE, COVER, FAN HOUSING | 1009737 | 1 | |
| 23 | FANS, CT, 208-240V TANS., VHC-5 | FA-3716 | 1 | |
| 24 | ASSEMBLY, WELD, PANEL, BOTTOM | RIGHT HAND | 5009151 | 1 |
| | LEFT HAND* | 5009504 | 1 | |
| 25 | PANEL, CONTROL SIDE | RIGHT HAND | 1008459 | 1 |
| | LEFT HAND* | 1010132 | 1 | |
| 26 | FILTER ASSEMBLY, ODOR | 5008976 | 1 | |
| 27 | FILTER ASSEMBLY, GREASE | 5008975 | 1 | |
| 28 | SWITCH, PUSH BUTTON SPST | SW-33495 | 1 | |
| 29 | WHITE PILOT LIGHT, 250V | LI-3951 | 1 | |
| 30 | SWITCH, CT, POWER, MAIN, RED | SW-33101 | 1 | |
| 31 | PANEL, OVERLAY, WHITE LOGO | PE-28690 | 1 | |
| 32 | SWITCH, CT, PUSH BUTTON, INSERT | SW-3683 | 1 | |
| 33 | LOWER FILTER HOLDER | 1009746 | 1 | |
| 34 | FLAP, FILTER, VHML-5, VHES-5 | 1001478 | 2 | |
| 35 | HOLDER, SWITCH | 1009747 | 2 | |
| 36 | WELDMENT, TUBE INNER | 5007005 | 1 | |
| 37 | MAGNET, SMCO, SILVER | MA-27568 | 1 | |

VENTLESS HOOD - SERVICE

FULL ASSEMBLY (RIGHT HAND, CURVED DOOR, PASS THROUGH SHOWN)

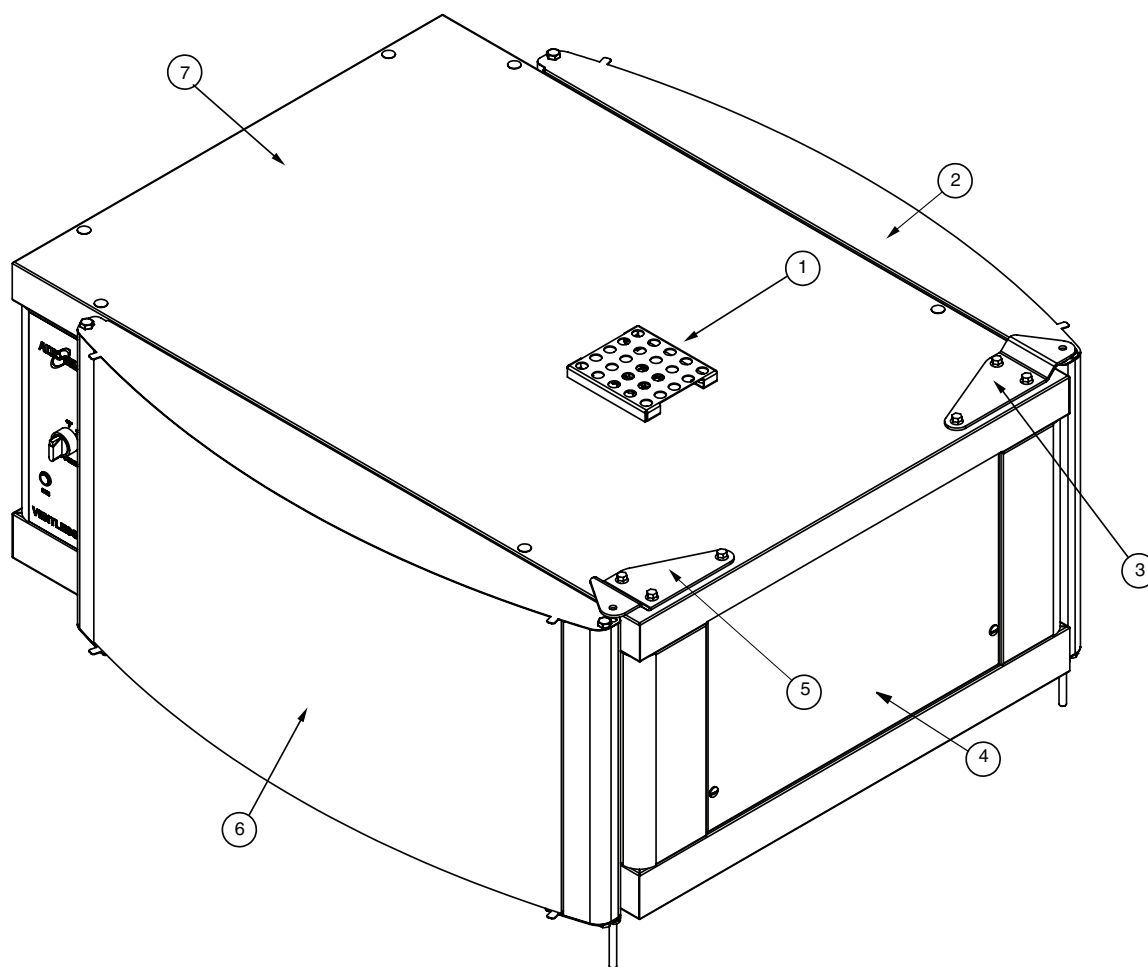

| | | MODEL > | | CURVED DOOR | | FLAT DOOR | |
|------|---------------------------------|----------|-----|-------------|-----|-----------|-----|
| ITEM | DESCRIPTION | PART NO. | QTY | PART NO. | QTY | PART NO. | QTY |
| 1 | HOUSING, DEFLECTOR, EXHAUST | 1010387 | 1 | 1010387 | 1 | 1010387 | 1 |
| 2 | DOOR ASSEMBLY, NON-CONTROL SIDE | 5009542 | 1 | 5009805 | 1 | 5009805 | 1 |
| 3 | HINGE, DOOR, REAR | 1007758 | 1 | 1007758 | 1 | 1007758 | 1 |
| 4 | COVER, SIDE | 1007843 | 2 | 1007843 | 2 | 1007843 | 2 |
| 5 | HINGE, DOOR, FRONT | 1007756 | 1 | 1007756 | 1 | 1007756 | 1 |
| 6 | DOOR ASSEMBLY, CONTROL SIDE | 5007184 | 1 | 5007184 | 1 | 5007184 | 1 |
| 7 | COVER, TOP | 1007841 | 1 | 1007841 | 1 | 1007841 | 1 |

TRANSPORTATION DAMAGE and CLAIMS



All Alto-Shaam equipment is sold F.O.B. shipping point, and when accepted by the carrier, such shipments become the property of the consignee.

Should damage occur in shipment, it is a matter between the carrier and the consignee. In such cases, the carrier is assumed to be responsible for the safe delivery of the merchandise, unless negligence can be established on the part of the shipper.

1. Make an immediate inspection while the equipment is still in the truck or immediately after it is moved to the receiving area. Do not wait until after the material is moved to a storage area.
2. Do not sign a delivery receipt or a freight bill until you have made a proper count and inspection of all merchandise received.
3. Note all damage to packages directly on the carrier's delivery receipt.
4. Make certain the driver signs this receipt. If he refuses to sign, make a notation of this refusal on the receipt.
Driver refuses to allow inspection of containers for visible damage.
5. If the driver refuses to allow inspection, write the following on the delivery receipt:
Driver refuses to allow inspection of containers for visible damage.
6. Telephone the carrier's office immediately upon finding damage, and request an inspection. Mail a written confirmation of the time, date, and the person called.
7. Save any packages and packing material for further inspection by the carrier.
8. Promptly file a written claim with the carrier and attach copies of all supporting paperwork.

We will continue our policy of assisting our customers in collecting claims which have been properly filed and actively pursued. We cannot, however, file any damage claims for you, assume the responsibility of any claims, or accept deductions in payment for such claims.

ALTO SHAAM. LIMITED WARRANTY

Alto-Shaam, Inc. warrants to the original purchaser only that any original part that is found to be defective in material or workmanship will, at Alto-Shaam's option, subject to provisions hereinafter stated, be replaced with a new or rebuilt part.

The parts warranty period is as follows:

For the refrigeration compressor on Alto-Shaam Quickchillers™, five (5) years from the date of installation.

For the heating element on Halo Heat® cook/hold ovens, as long as the original purchaser owns the oven.

For all other parts, one (1) year from the date of installation or fifteen (15) months from the shipping date, whichever occurs first.

The labor warranty period is one (1) year from the date of installation or fifteen (15) months from the shipping date, whichever occurs first.

Alto-Shaam will bear normal labor charges performed during standard business hours, excluding overtime, holiday rates or any additional fees.

To be valid, a warranty claim must be asserted during the applicable warranty period. This warranty is not transferable.

THIS WARRANTY DOES NOT APPLY TO:

1. Calibration.
2. Replacement of light bulbs and/or the replacement of display case glass due to damage of any kind.
3. Equipment damage caused by accident, shipping, improper installation or alteration.
4. Equipment used under conditions of abuse, misuse, carelessness or abnormal conditions, including but not limited to, equipment subjected to harsh or inappropriate chemicals, including but not limited to, compounds containing chloride or quaternary salts, poor water quality, or equipment with missing or altered serial numbers.
5. Damage incurred as a direct result of poor water quality, inadequate maintenance of steam generators and/or surfaces affected by water quality. Water quality and required maintenance of steam generating equipment is the responsibility of the owner/operator.
6. Damage caused by use of any cleaning agent other than Alto-Shaam's Combitherm® Cleaner, including but not limited to damage due to chlorine or other harmful chemicals. **Use of Alto-Shaam's Combitherm® Cleaner on Combitherm® ovens is highly recommended.**
7. Any losses or damage resulting from malfunction, including loss of product or consequential or incidental damages of any kind.
8. Equipment modified in any manner from original model, substitution of parts other than factory authorized parts, removal of any parts including legs, or addition of any parts.

This warranty is exclusive and is in lieu of all other warranties, express or implied, including the implied warranties of merchantability and fitness for a particular purpose. In no event shall Alto-Shaam be liable for loss of use, loss of revenue or profit, or loss of product, or for any indirect, special, incidental, or consequential damages. No person except an officer of Alto-Shaam, Inc. is authorized to modify this warranty or to incur on behalf of Alto-Shaam any other obligation or liability in connection with Alto-Shaam equipment.

ALTO-SHAAM, INC.

Effective 02/09

RECORD THE MODEL AND SERIAL NUMBER OF THE APPLIANCE FOR EASY REFERENCE.
ALWAYS REFER TO BOTH MODEL AND SERIAL NUMBER IN ANY CONTACT WITH ALTO-SHAAM REGARDING THIS APPLIANCE.

Model: _____ Date Installed: _____
Voltage: _____ Purchased From: _____
Serial Number: _____

W164 N9221 Water Street • P.O. Box 450 • Menomonee Falls, Wisconsin 53052-0450 • U.S.A.
PHONE: 262.251.3800 • 800.558-8744 USA/CANADA FAX: 262.251.7067 • 800.329.8744 U.S.A. ONLY

www.alto-shaam.com

PRINTED IN U.S.A.